

# [POWER COMMANDER V]

## 2009 Kawasaki KX450F

### Installation Instructions



#### PARTS LIST

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Dual Lock strips
- 1 Alcohol swab

**THE IGNITION MUST BE TURNED  
OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER  
SOFTWARE AND MAP FILES CAN BE  
DOWNLOADED FROM OUR WEB SITE AT:  
[www.powercommander.com](http://www.powercommander.com)

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

**Dynojet**

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 [www.powercommander.com](http://www.powercommander.com)

# POWER COMMANDER V INPUT ACCESSORY GUIDE

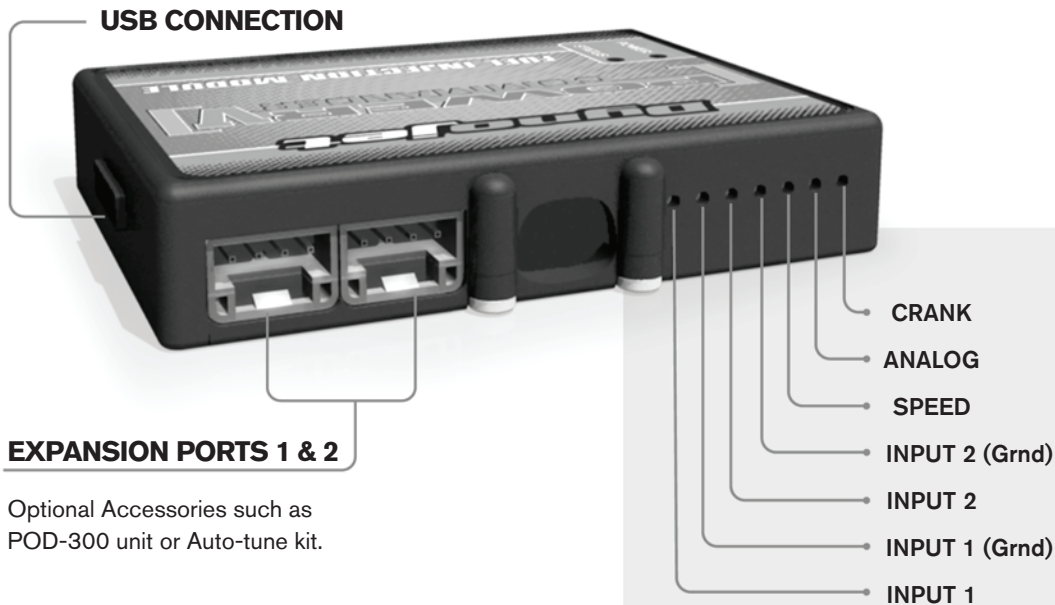

## Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



## ACCESSORY INPUTS

### Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

### Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

### Speed-

If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

### Analog-

This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

### Crank-

Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

**FIG.A**




- 1 Remove the seat, fuel tank, and front number plate.
- 2 Using the supplied Dual Lock strips, attach the PCV module to the back side of the number plate (Fig. A).

*Clean surfaces with the supplied alcohol swab prior to applying the Dual Lock adhesive.*


- 3 Route the PCV wiring harness to the left side of the frame following along the throttle cable.

**FIG.B**

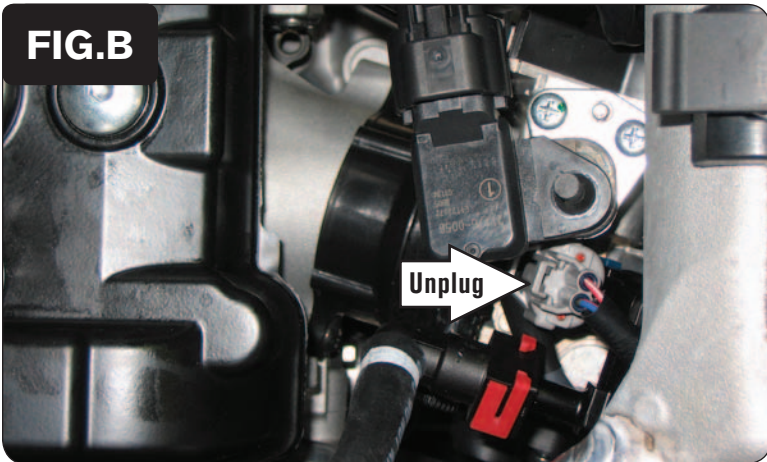


- 4 Unplug the stock wiring harness from the Fuel Injector (Fig. B).

**FIG.C**

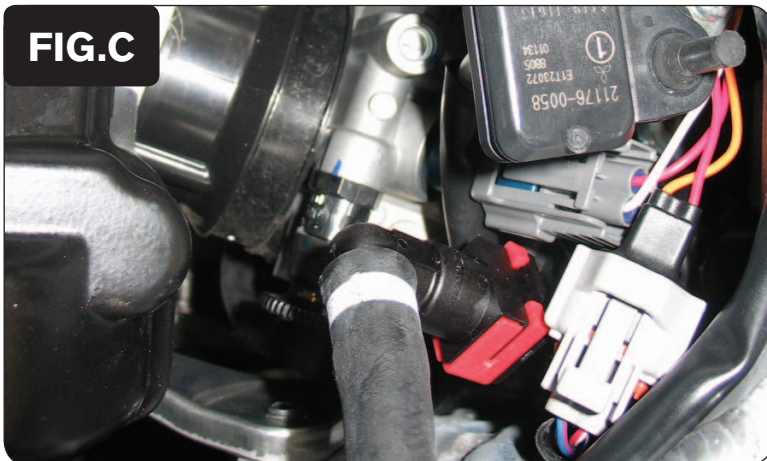


- 5 Plug the PCV in-line of the bike's Fuel Injector and the stock wiring harness (Fig. C).

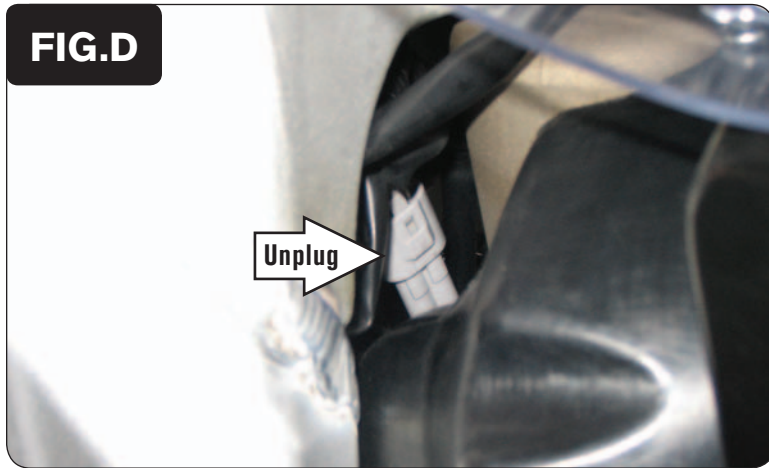


- 6 Unplug the stock connector for the bike's Throttle Position Sensor (Fig. D).  
*This is a 3-pin connector located just rear of the throttle body. It is accessed easiest from the right side of the bike.*

*Figure D was taken from the left side of the bike looking between the frame and the airbox.*

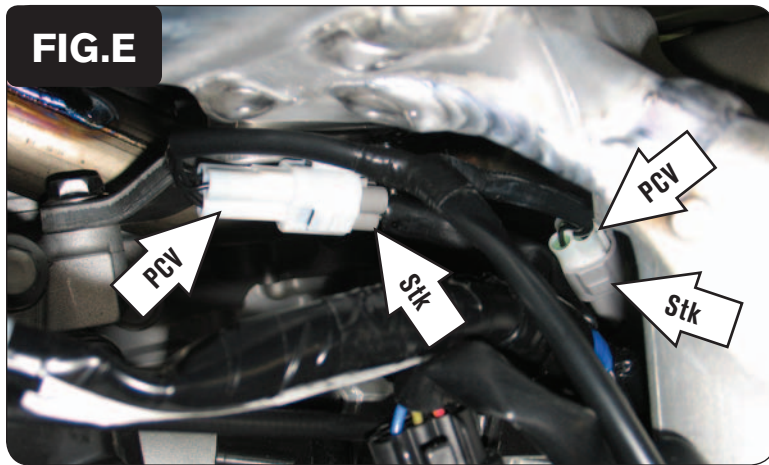

- 7 Plug the PCV wiring harness in-line of the stock TPS connectors (Fig. E).

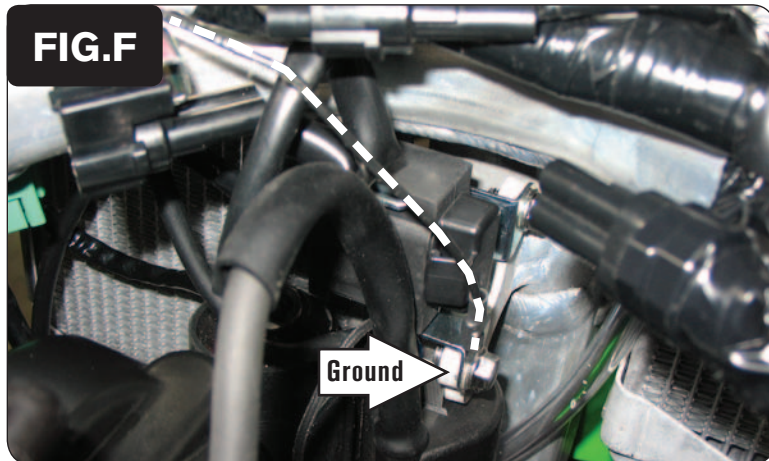

- 8 Remove the upper bolt that holds the bike's Ignition Coil to the frame. Use this bolt to secure the PCV ground wire with the small ring lug at this location on the frame (Fig. F).
- 9 Reinstall the fuel tank, seat, and number plate.  
*Make sure the fuel tank does not pinch the PCV wiring harness.*