

POWER COMMANDER FC

2013-2014 Kawasaki ZX-6R

Installation Instructions



Parts List

- 1 Power Commander FC
- 1 USB Cable
- 1 Installation Guide
- 2 Dynojet Decals
- 2 Velcro
- 1 Alcohol swab


**THE IGNITION MUST BE TURNED
OFF BEFORE INSTALLATION!**

YOU CAN ALSO DOWNLOAD THE PCFC
CONTROL CENTER SOFTWARE AND
LATEST MAPS FROM OUR WEB SITE AT:
www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

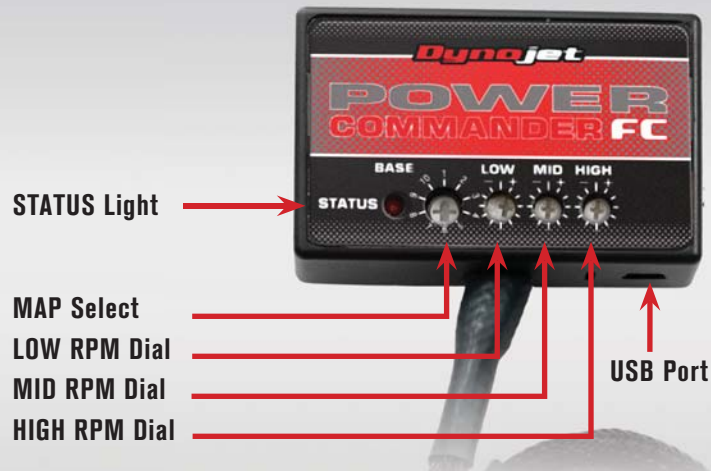

Position	Note
Position 1	2013-2014 Kawasaki ZX636 Stock exhaust Stock or aftermarket air filter

SELECTING THE MAP POSITION

The Dynojet Power Commander Fuel Controller (PCFC) comes loaded with up to ten maps. Using a #1 Phillips screwdriver, turn the map select dial to toggle between the loaded maps. Refer to the map position table for the maps included in your PCFC.

USING THE RPM RANGE DIALS

The Low, Mid, and High RPM Dials refer to the RPM range, in thirds, of your vehicle. Each dial allows +/- 10% fuel adjustment on top of what fuel changes are done in the map. With the dial facing straight up, there is no additional fuel change.

For example, if your vehicle revs to 6000 RPM:

- The low RPM dial will adjust 0-2000 RPM
- The mid RPM dial will adjust 2001-4000 RPM
- The high RPM dial will adjust 4001-6000 RPM

USING PCFC CONTROL CENTER

Take your tuning to the next level with the PCFC Control Center software.


- 1 Using your web browser, navigate to www.powercommander.com.
- 2 Click Enter Race Ready.
- 3 Click Downloads.
- 4 Click Access Downloads for Power Commander FC.
- 5 Click the PCFC software Download button.
- 6 Open the zip folder.
- 7 Double-click the install file and follow the on-screen instructions to install the PCFC Control Center software. The PCFC Control Center software and maps will be stored in C:\Program Files\PCFC Control Center.
- 8 Return to the Downloads or Home page where you can enter the make, model, and year of your bike to check for and download additional maps.

LOADING ADDITIONAL MAPS

- 1 Connect the USB cable from the computer to the PCFC. Verify the cable is fully seated in the PCFC.
- 2 Run the Control Center software by double-clicking the program icon installed on your desktop or on your start menu.
- 3 Click Open Map File and select a map file.
- 4 Click Send Map. You can send the map to any of the ten map positions.

ALTERING MAPS USING SOFTWARE

The values in the map represent a percentage of fuel change over stock. A value of 10 in the map indicates at that throttle position and RPM range the vehicle will be 10% richer than stock. If the value is -10, then it would be 10% leaner than stock. You have the ability to fine tune your fuel curve by altering these values. The Control Center software allows a value of +250 to -100 in each cell.

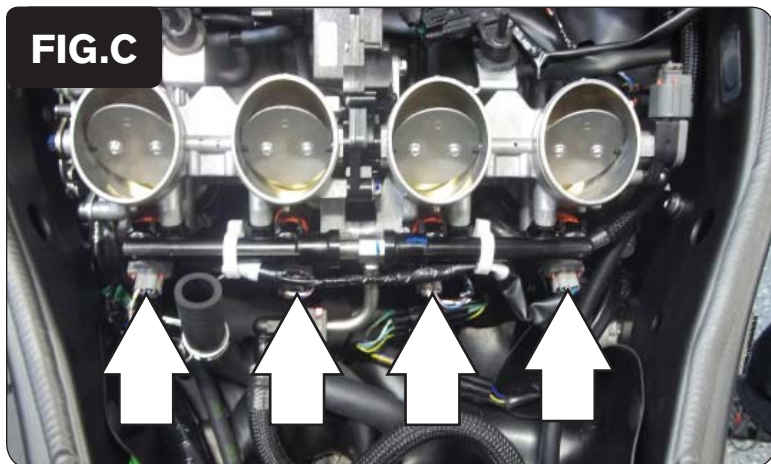

- 1 Remove the main seat and the passenger seat.
- 2 Remove the plastic covers from both sides of the fuel tank.
- 3 Remove the fuel tank.
- 4 Remove the airbox.


The bottom clamps of the airbox can be loosened by accessing them through the hole in the frame as shown in Figure A.

- 5 Using the supplied velcro, secure the PCFC inside the tail section as shown in Figure B.

Make sure to clean both surfaces with the alcohol swab before attaching.

- 6 Route the PCFC wiring harness towards the throttle bodies down the left hand side of the bike.
- 7 Attach the ground wire with the 6mm ring lug from the PCFC harness to the negative side of the battery as shown in Figure B.

- 8 Unplug the stock wiring harness from each of the fuel injectors as shown in Figure C.

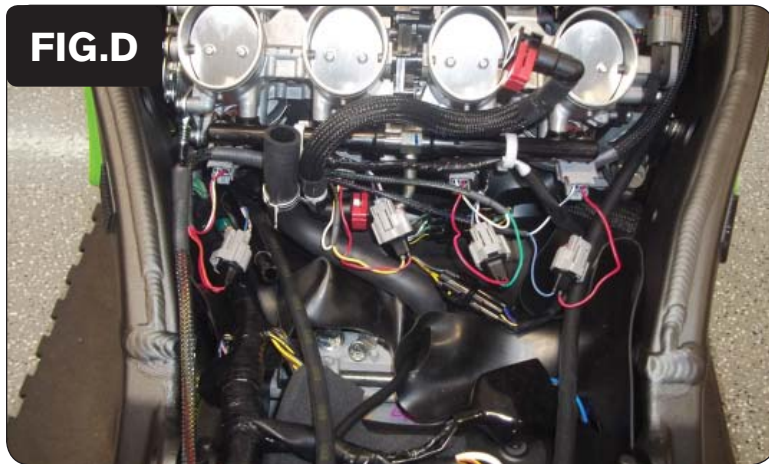

- 9 Attach the connectors from the PCFC wiring harness to the stock wiring harness and fuel injectors as shown in Figure D.

Attach the connectors with the orange colored wires to the #1 cylinder fuel injector.

Attach the connectors with the yellow colored wires to the #2 cylinder fuel injector.

Attach the connectors with the green colored wires to the #3 cylinder fuel injector.

Attach the connectors with the blue colored wires to the #4 cylinder fuel injector.



- 10 Locate and unplug the stock wiring harness from the bikes primary Throttle Position Sensor (TPS) on the right-hand side of the throttle bodies as shown in Figure E.

Note: This is the lower TPS with the black connector; not the upper TPS with the grey connector.



- 11 Attach the connectors from the PCFC wiring harness to the primary TPS and stock wiring harness as shown in Figure F.
- 12 Replace the airbox.
- 13 Replace the fuel tank.
- 14 Replace the plastic covers.
- 15 Replace the passenger seat and main seat.