

# [POWER COMMANDER V]

**2013-2014 KTM  
250/350/450 SXF/XCF models**

**Installation Instructions**



## **PARTS LIST**

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro strips
- 1 Alcohol swab
- 3 Zip ties

**THE IGNITION MUST BE TURNED  
OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER  
SOFTWARE AND MAP FILES CAN BE  
DOWNLOADED FROM OUR WEB SITE AT:  
[www.powercommander.com](http://www.powercommander.com)

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

**Dynojet**

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 [www.powercommander.com](http://www.powercommander.com)

# POWER COMMANDER V INPUT ACCESSORY GUIDE

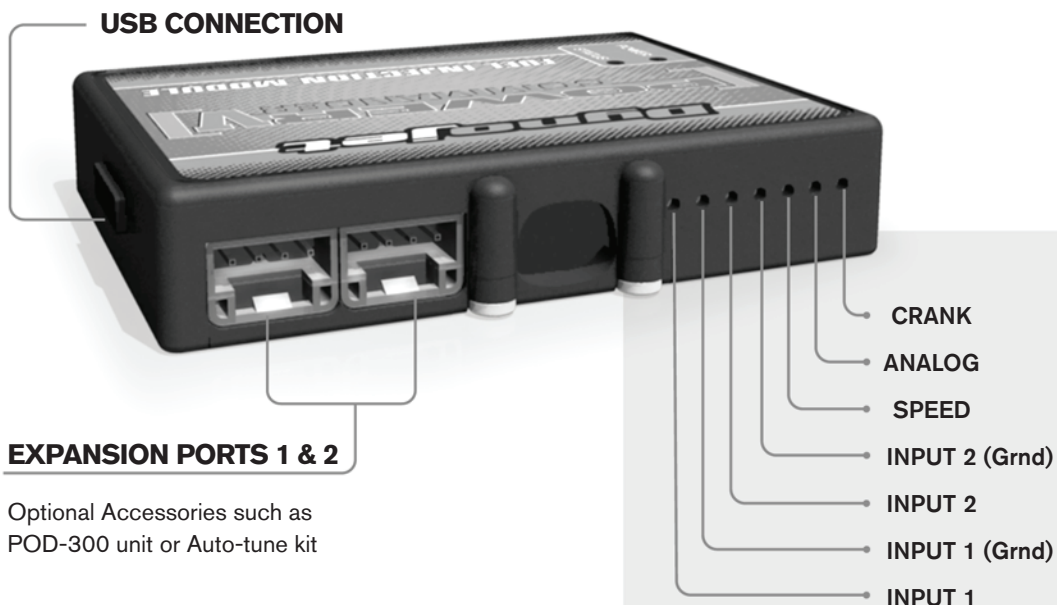


## EXPANSION PORTS 1 & 2

Optional Accessories such as  
POD-300 unit or Auto-tune kit

## Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.

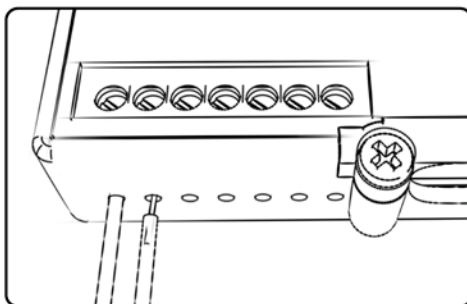

## ACCESSORY INPUTS

### Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

### Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

### Speed-




If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

### Analog-

This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

### Crank-

Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

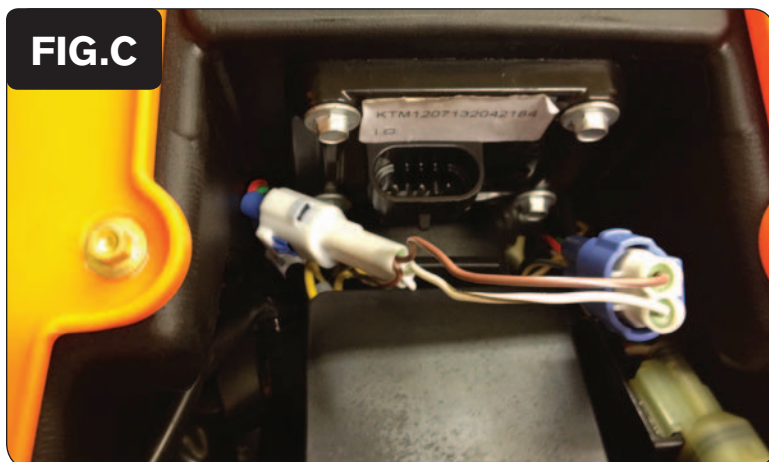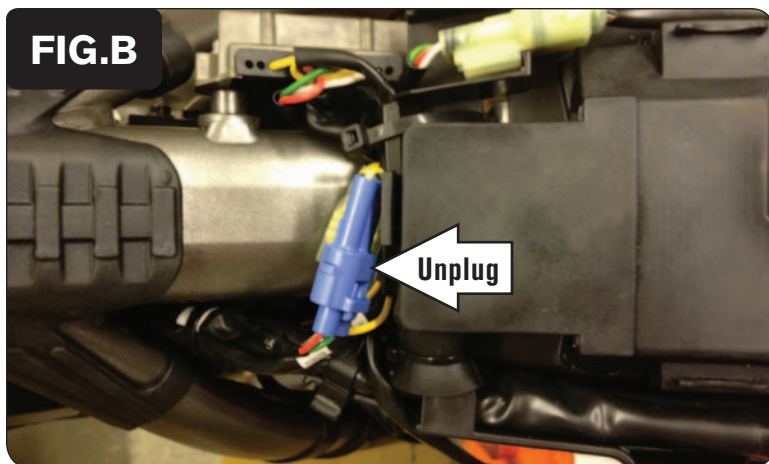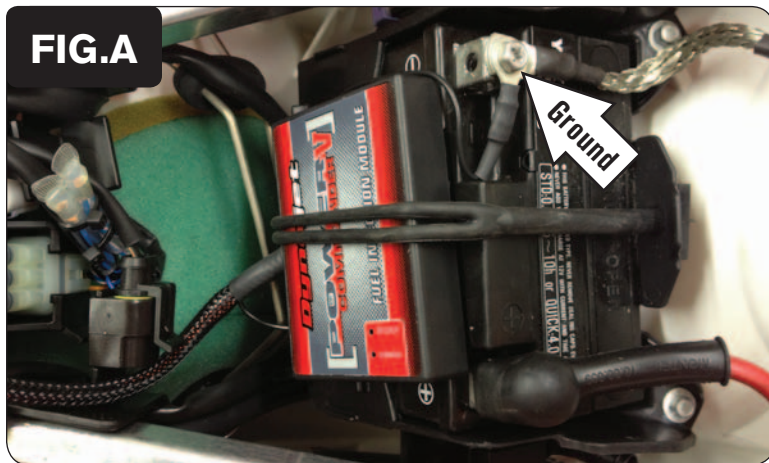


- 1 Remove the seat.
- 2 Remove the fuel tank.
- 3 Use the stock battery retention strap to secure the PCV module to the bike's battery.  
*The supplied Velcro strips could be used to secure the module if preferred. Clean both surfaces with the supplied alcohol swab prior to applying the Velcro.*
- 4 Secure the PCV ground wire with the small ring lug to the negative (-) terminal of the bike's battery (Fig. A).

- 5 Locate and unplug the stock Crank Position Sensor connectors (Fig. B).  
*This is a BLUE 2-pin connector pair located in front of the bike's ECU.*

- 6 Plug the PCV wiring harness in-line of the stock CPS connectors (Fig. C).




**FIG.D**

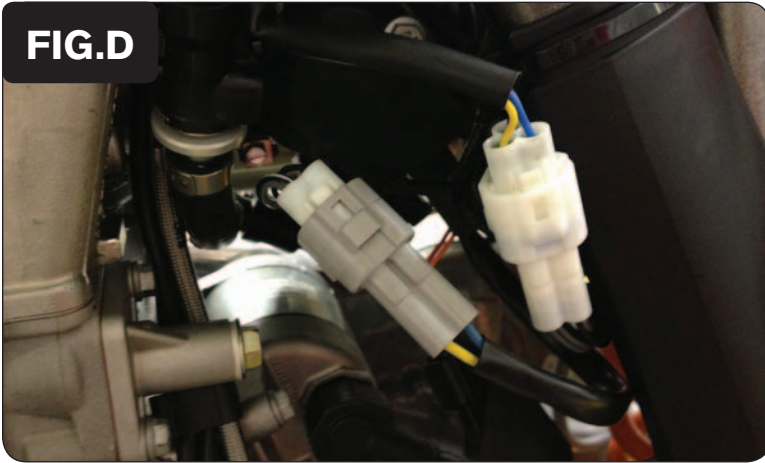

- 7 Route the PCV wiring harness downward and through the frame.
- 8 Locate and unplug the stock Throttle Position Sensor connectors.
- 9 Plug the PCV wiring harness in-line of the stock TPS connectors (Fig. D).

**FIG.E**

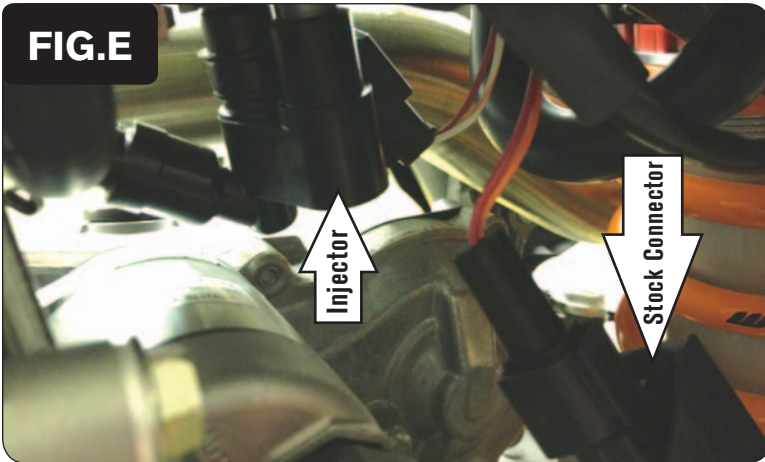

- 10 Unplug the stock wiring harness from the fuel injector.  
*The fuel injector is located beneath the throttle body.*
- 11 Plug the PCV wiring harness in-line of the fuel injector and the stock wiring harness (Fig. E).
- 12 Use the supplied zip ties to secure the PCV wiring harness such that it will stay free and clear of any hot or moving parts.
- 13 Reinstall the fuel tank and the seat.