



2004-2007 Suzuki DL650

Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Wire tap
- 1 Alcohol Swab

The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com


Button Adjustment Display





PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

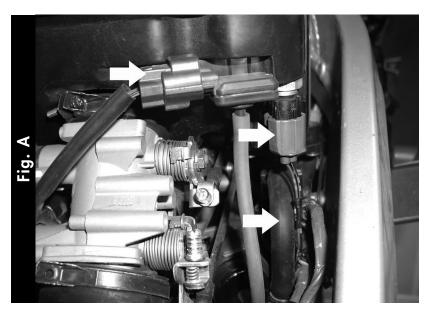

- 1. Remove the seat.
- 2 Prop the front of the fuel tank up.
- Remove the airbox by unplugging the connectors and hoses shown in Figure A & B.




- 4 Loosen the clamps holding the throttle bodies into the intake manifolds.
- Pull the throttle bodies out of the intake manifolds to allow access to the injectors.

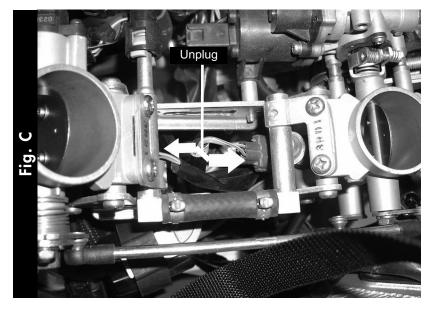

6 Unplug the stock wiring harness from each injector (Fig. C).


Note the orientation of the wires for each cylinder.

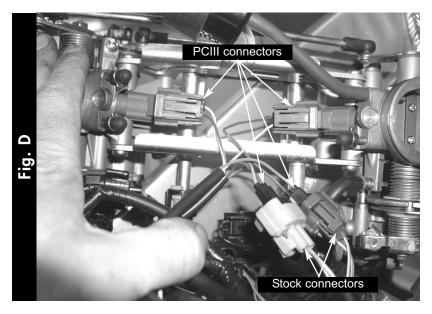

Plug the wiring harness from the PCIII in-line of the stock wiring harness and injectors (Fig D).

Plug the ORANGE colored wires to the front cylinder and the YELLOW colored wires to the rear cylinder.

8 Reinstall the throttle bodies into the intake manifolds. Tighten clamps.

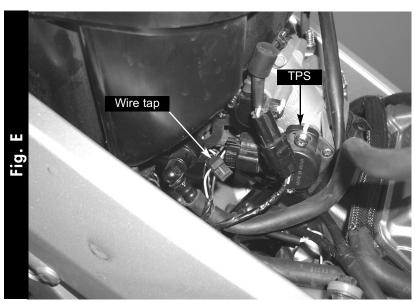

- 9 Locate the Throttle Position Sensor on the left hand side of the throttle bodies.
- Attach the supplied wire tap to the PINK wire of the stock TPS wiring harness (Fig. E).
- 11 Connect the GREY wire from the PCIII to the wire tap.

Note: It is recommended to use dielectric grease on these connections.

- 12 Reinstall the airbox and connect all hoses and wires.
- Route the Power Commander harness as shown in fig. F.
- Attach the ground wire from the Power Commander to the negative side of the battery.
- 15 Use the supplied velcro to attach the PCIII to the inner rear fender. Make sure to use the supplied alcohol swab to clean both surfaces first.
- 16 Reinstall fuel tank and seat.

