



2006-2007 Polaris Ranger XP

Installation Instructions

Button Adjustment Display

FUEL

Faceplate Buttons

Expansion Port

USB Port

-h

- Parts List
- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro[®] Strip
- 1 Alcohol Swab

The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:


www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com




- Remove the seat.
- Unplug the connectors from the injector leads (Fig. A).

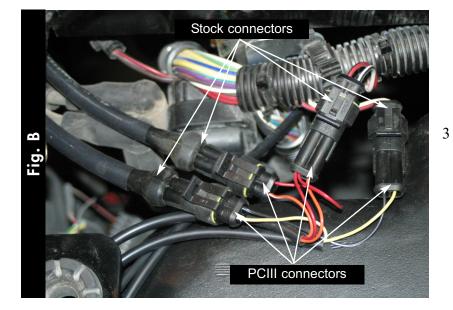



Connect the PCIII in-line of the stock wiring harness and the injectors (Fig. B).

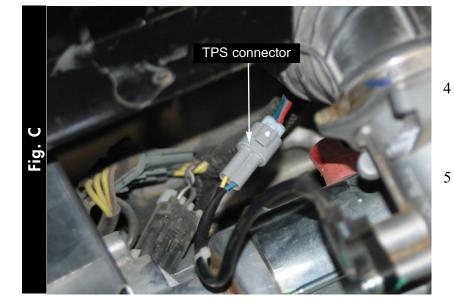

- Locate the stock Throttle Position Connector on the right hand side of the throttle body. This is a GREY 3 pin connector (Fig. C).
- Unplug this connector.

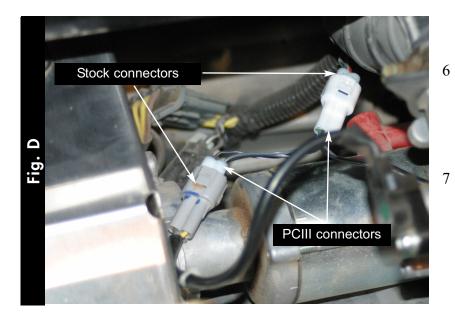

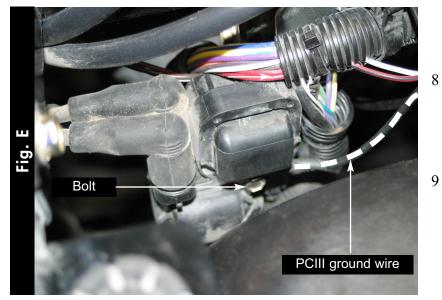

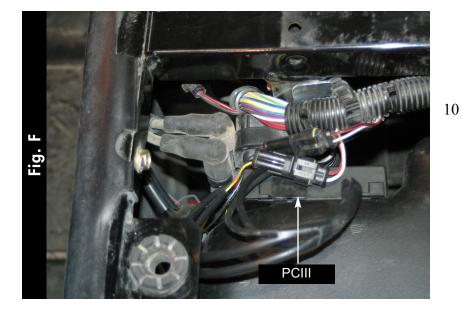

- Route the white connectors from the PCIII from the fuel tank area to the throttle body, routing the harness underneath the frame and under the intake snorkel.
- Plug the connectors from the PCIII in-line of the stock TPS connector and wiring harness (Fig. D).

Remove the bolt that holds the coil pack to the bracket (Fig. E).

This coil pack is located next to the fuel tank

Reinstall the bolt thru the ground wire of the PCIII and then to the bracket (Fig. E).

D Install the PCIII to the side of the fuel tank using the supplied velcro (Fig. F).

Make sure to use the alcohol swab to clean both surfaces before attaching.