Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

> 2191 Mendenhall Dr. Suite 105 North Las Vegas, NV 89031 TEL: 702-399-1423 FAX: 702-399-1431 8am-5pm Pacific Time Monday through Friday

> > Website Address http://www.dynojet.com

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.




E2153.001 European Models Only

1993-98 Kawasaki ZZR600

Stage 1

For mildly tuned machines using the stock airbox, with stock or K&N filter. May also be used with a good aftermarket exhaust system K&N filter #KA-0012

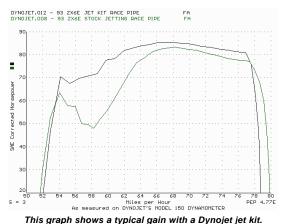

WARNING

NO SMOKING! NO OPEN FLAME! WHILE INSTALLING YOUR DYNOJET KIT

Parts List		
4	Main Jets	DJ130
4	Main Jets	DJ134
4	Main Jets	DJ138
4	Fuel Needles	DNO348
8	Adjusting Washers	DW0001
4	E-Clips	DE0001
1	Slide Drill	DD #32

STAGE ONE INSTRUCTIONS


1. Remove the vacuum slide from the carbs. Remove the stock needles & spacers, noting order of assembly.

2. Using the slide drill (DD #32) provided, drill an auxiliary lift hole in the position of the x in Fig. A. If you would rather not drill the extra hole that is fine, but you will not get as big as performance gains out of this kit.

3. Install the Dynojet needles on groove# 4 from the top, using all stock spacers. Install the Dynojet washers above the E-clip (two per needle).

4. Remove the stock main jets and replace with the Dynojet main jets provided. If you are running the stock exhaust use the DJ130 main jets, If you are running an aftermarket header or slip-on with high flowing baffle, use the DJ134 main jets. Be sure that the jets you are changing are the main jets.

5. Locate the Fuel Mixture Screws (Fig. B), carefully turn mixture screws clockwise until lightly seated, then turn back out until you find your best idle. Our base setting is 3 turns.

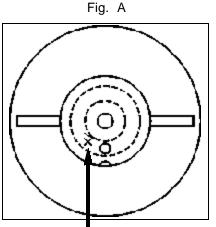

Auxiliary Slide Lift Hole Location

Fig. B

