Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105 North Las Vegas, NV 89031 TEL: 702-399-1423 FAX: 702-399-1431 8am-5pm Pacific Time Monday through Friday

Website Address http://www.dynojet.com

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.



E4250.001


European Models Only

1989-97 Yamaha XTZ 750

Stage 2

For mildly tuned machines using the stock airbox, with stock or K&N filter. May also be used with a good aftermarket exhaust system.

K&N Filter# YA-0075

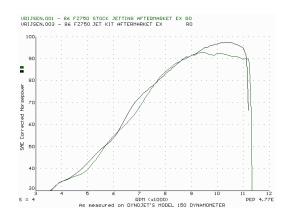

This graph shows a typical gain with a Dynojet jet kit.

WARNING

NO SMOKING! NO OPEN FLAME! WHILE INSTALLING YOUR DYNOJET KIT

Parts List		
2	Main Jets	YJ155
2	Main Jets	YJ160
4	Main Jet O-Rings	YJ-0
1	Slide Drill	DD#5/32
2	Fuel Needles	DNO322
2	Slide Springs	DSP016
2	Adjusting Washers	DW0001
2	E-Clips	DE0001

STAGE TWO INSTRUCTIONS

E4250.001

- 1. Remove vacuum slide from carbs. Remove stock needles & spacers, noting order of assembly (Fig. A). Locate slide lift holes, with slide drill (DD#5/32) provided, enlarge your slide lift holes. Do **not** drill the needle hole.
- 2. Install the Dynojet needles on groove# 4 , using all stock spacers (Fig. A). Install the Dynojet washer above the E-clip.
- 3. Remove stock main jets and replace with Dynojet mains provided. Use YJ155 main jets with stock exhaust pipe, or use YJ160 main jets with aftermarket header or slip-on with high flowing baffles. Be sure that the jets you are changing are the main jets.
- 4. Install the Dynojet spring in place of the stock spring, making sure the spring is aligned properly.
- 5. Locate the Fuel Mixture Plug (Fig. B). Carefully turn mixture screw clockwise until lightly seated, then back out 2-1/2 turns.

