

Q521.001

2005-2006 Polaris

Phoenix 200

Stage 1

For mildly tuned machines using the stock airbox with stock or aftermarket filter. May also be used with a good aftermarket exhaust system.

<i>Parts List</i>		
1	Main Jet	DJ092
1	Main Jet	DJ096
1	Main Jet	DJ100
1	Main Jet	DJ104
1	Fuel Needle	DNO309
1	Adjusting Washers	DW0001
1	E-Clip	DE0001
1	Air Screw Tool	DT008

STAGE ONE INSTRUCTIONS

1. Unscrew the carb top. Disconnect the throttle cable and remove the slide. Remove needle retainer.(Fig.A).
2. Install Dynojet needle on groove #5 for applications below 5000 feet, groove #4 for above 5000 feet, using all stock spacers. Install the Dynojet washer above the E-clip.
3. Locate the stock main jet, inside the float bowl. Remove stock main jet and replace with Dynojet main provided. Use the DJ100 below 3000 feet, DJ096 from 3000 to 6000 feet and DJ092 above 6000 feet. When running an aftermarket exhaust, use the DJ104 below 3000 feet, DJ100 from 3000-6000 feet and the DJ096 above 6000 feet. Be sure that the jet you are changing is the main jet.
4. Locate the air screw (Fig. B). Using the tool provided DT008, turn the air screw clockwise until it seats, then turn out 1 turn.

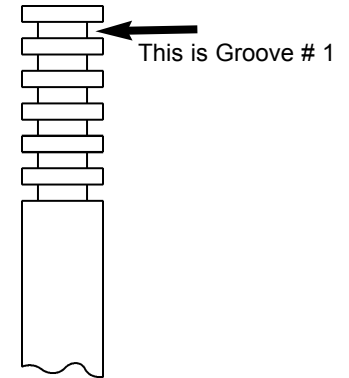


Fig.A

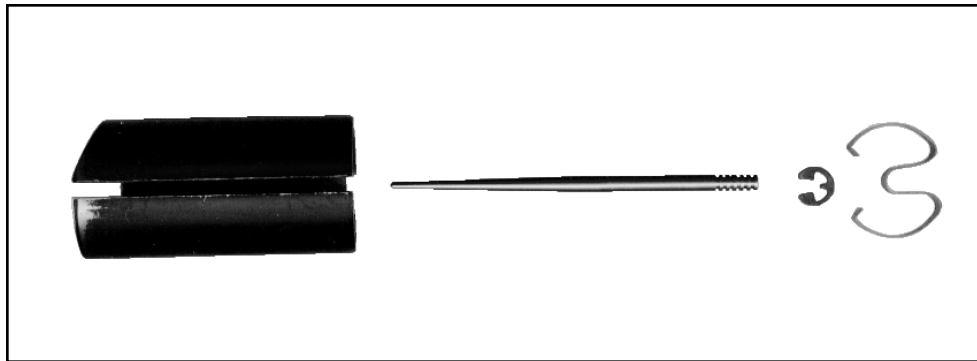


Fig.B



Air Screw

Float Bowl