

# [POWER COMMANDER V]

## FUEL AND IGNITION

**2008-2012 Husqvarna Mikuni ECU models**

Installation Instructions



### PARTS LIST

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro strips
- 1 Alcohol swab
- 1 O2 Optimizer
- 1 Posi-tap

**THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER SOFTWARE AND MAP FILES CAN BE DOWNLOADED FROM OUR WEB SITE AT:  
[www.powercommander.com](http://www.powercommander.com)

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

**Dynojet**

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 [www.powercommander.com](http://www.powercommander.com)


# POWER COMMANDER V INPUT ACCESSORY GUIDE

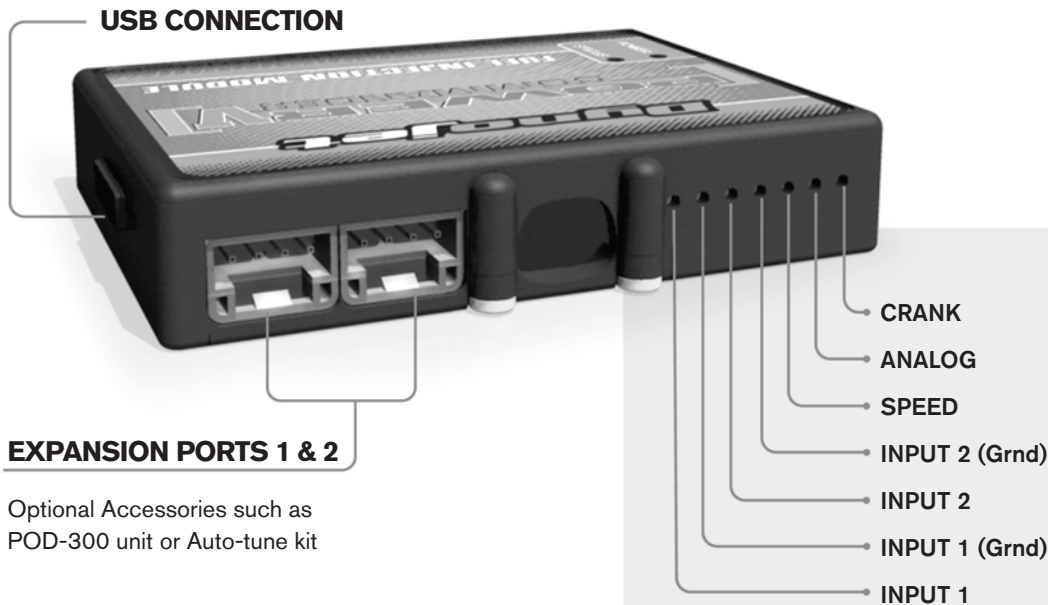

## Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.

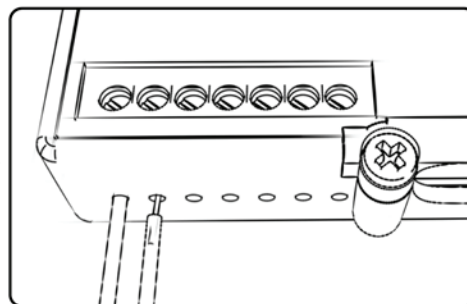

## ACCESSORY INPUTS

### Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

### Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

### Speed-

If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

### Analog-

This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.


### Crank-

Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.




- 1 Remove the seat.
- 2 Remove the fuel tank.
- 3 Using the supplied Velcro, attach the PCV to the inner side of the right hand side cover (Fig. C).


*Make sure to clean both surfaces with the alcohol swab before attaching.*

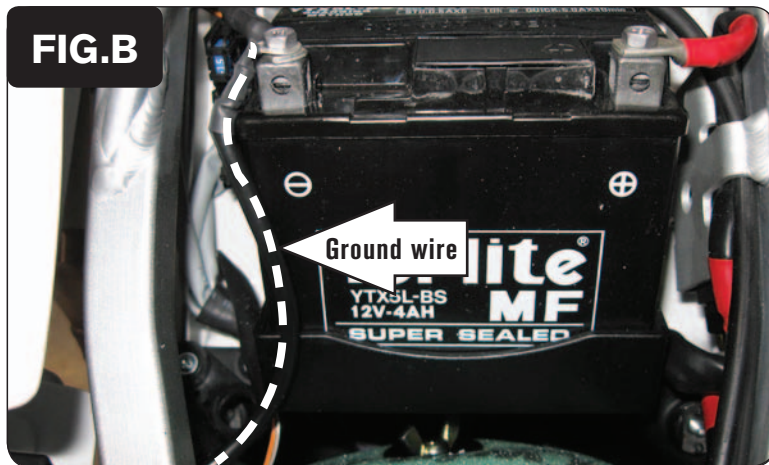


- 4 Attach the ground wire from the PCV to the negative side of the battery (Fig. B).

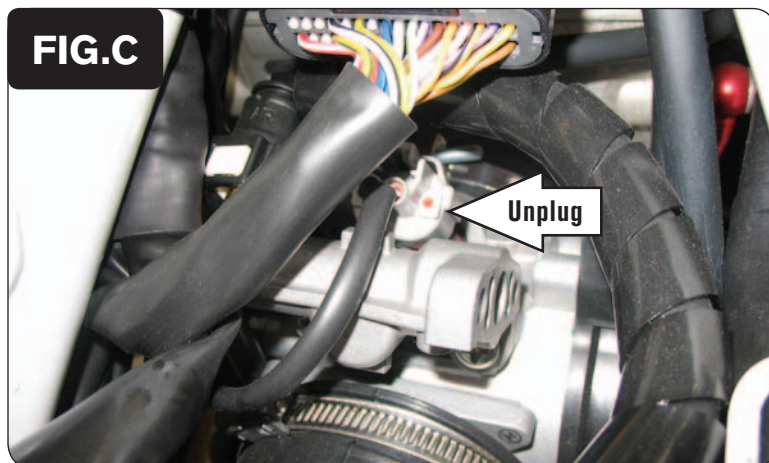

- 5 Route the PCV harness towards the throttle body going underneath the frame support.
- 6 Unplug the stock wiring harness from the fuel injector (Fig. C).

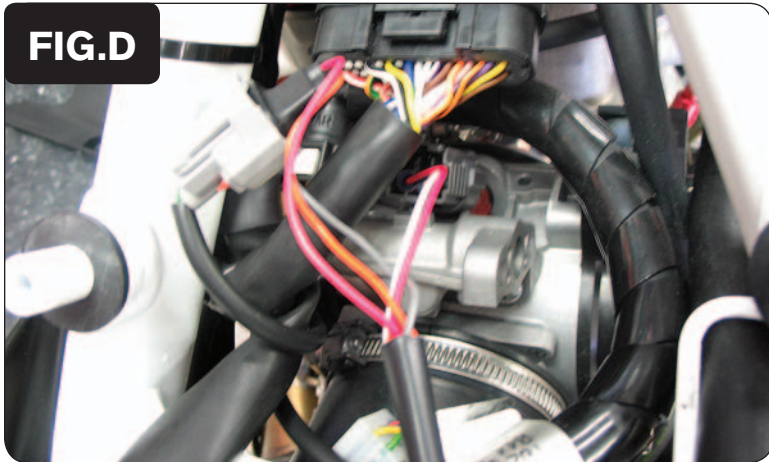



- 7 Plug the PCV wiring harness in-line of the fuel injector and the stock wiring harness (Fig. D).

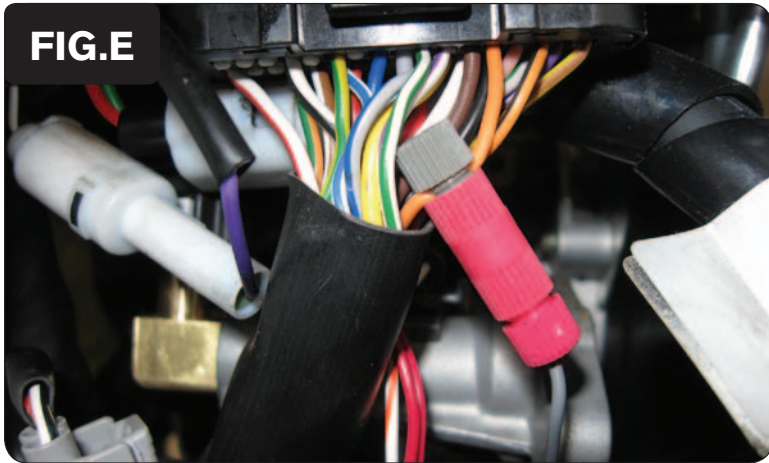

- 8 Using the supplied posi-tap attach the GREY wire from the PCV to the stock ORANGE/BLACK wire of the stock ECU connector (Fig. E).


*This is the 3rd wire from the end, on the top row of the ECU.*

*On some models this wire might be solid ORANGE.*

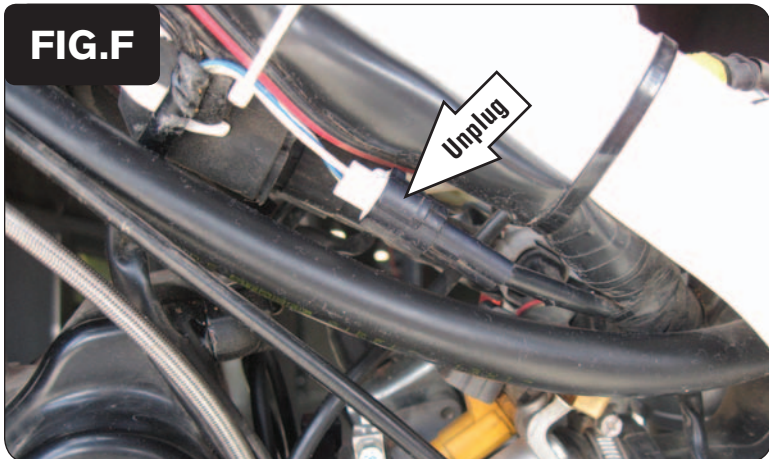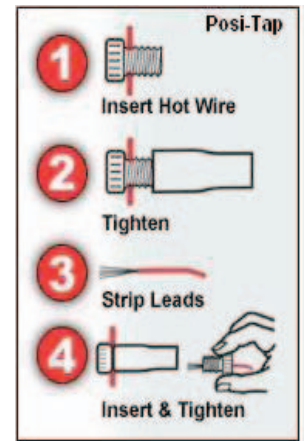


- 9 Locate and unplug the stock connectors for the vehicle's Crank Position Sensor (Fig. F).

*This connector pair is on the left side of the bike and is just under the frame rail. It is a 2-pin connector pair. It is black on one side and white on the other.*

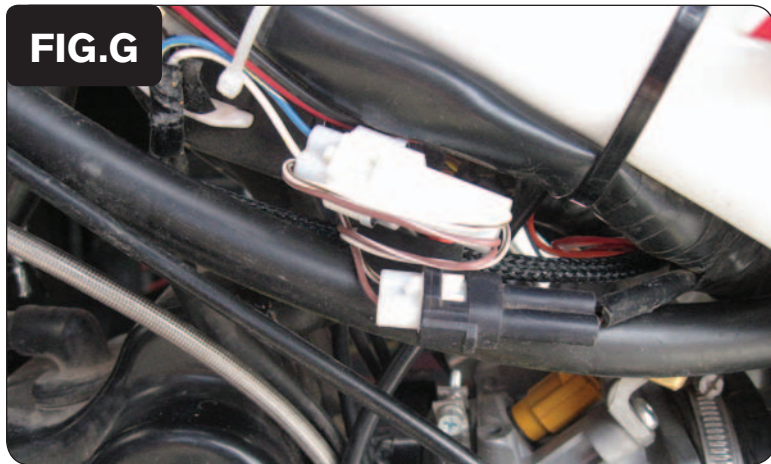


- 10 Plug the pair of WHITE 2-pin PCV connectors with BROWN colored wires in-line of the bike's stock Crank Position Sensor connectors (Fig. G).

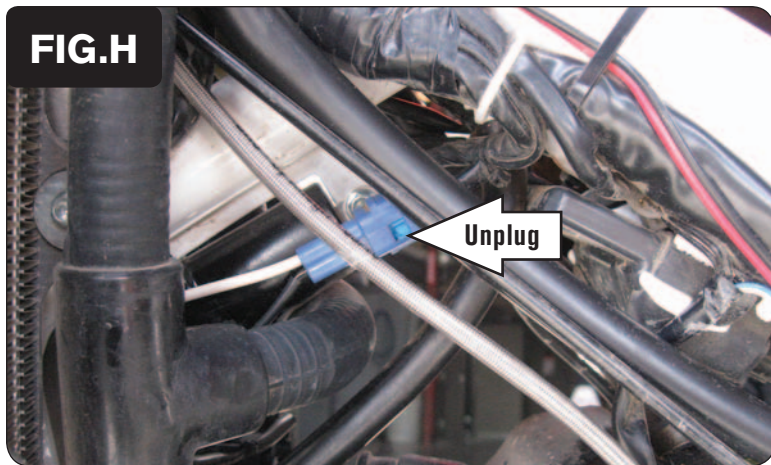

- 11 Locate and unplug the stock connectors for the bike's Ignition Coil (Fig. H).  
*These connectors are on the left side of the bike, under the frame rail, and forward of the crank position sensor connectors. It is a 2-pin pair of connectors and both are BLUE in color.*



- 12 Plug the pair of WHITE 2-pin PCV connectors with RED and GREEN colored wires in-line of the bike's stock Ignition Coil connectors (Fig. J).

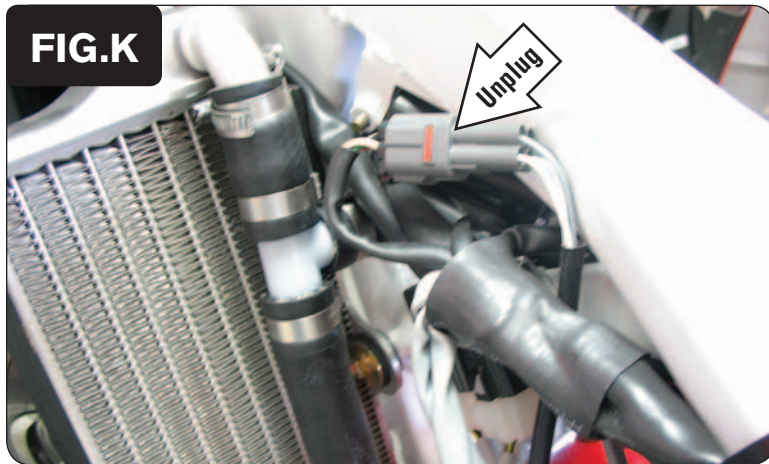

- 13 Locate the stock O2 sensor connection. This is under the fuel tank on the left hand side of the frame (Fig. K).
- 14 Unplug this connection and plug the supplied O2 Optimizer into the stock wiring harness.  
*The stock O2 sensor will no longer be used. It can be removed from the exhaust if desired and if you have a way to plug the hole in the exhaust.*
- 15 Reinstall the fuel tank and the seat.