

[POWER] COMMANDER III

CERTIFIED **USB**

2002 - 2004 HONDA CBR 1100 XX (2001 – 2004 European Model) Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:


www.powercommander.com

Expansion Port


USB Port




PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

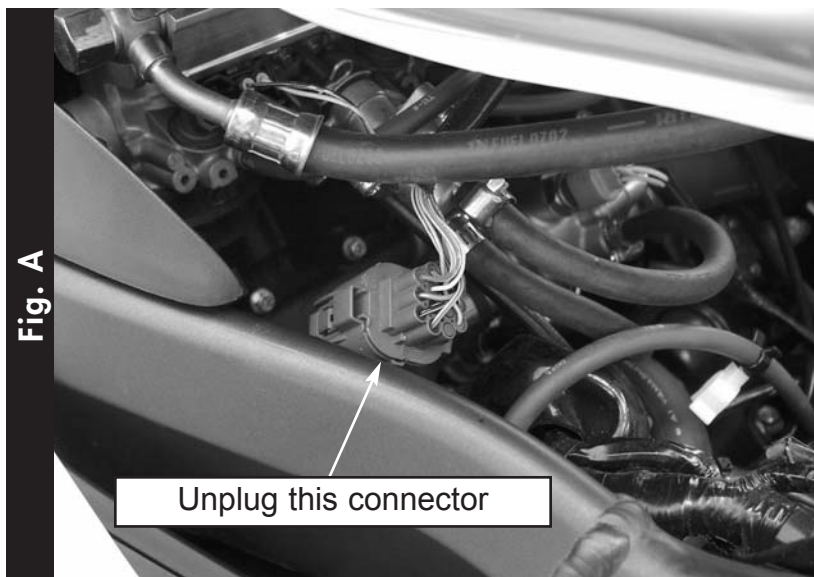

- 1 Remove the seat.
- 2 Lift the front of the fuel tank up.
- 3 Unplug the grey connector from the wiring harness (Fig. A). This connector is located on the left hand side of the bike and comes from the throttle bodies.

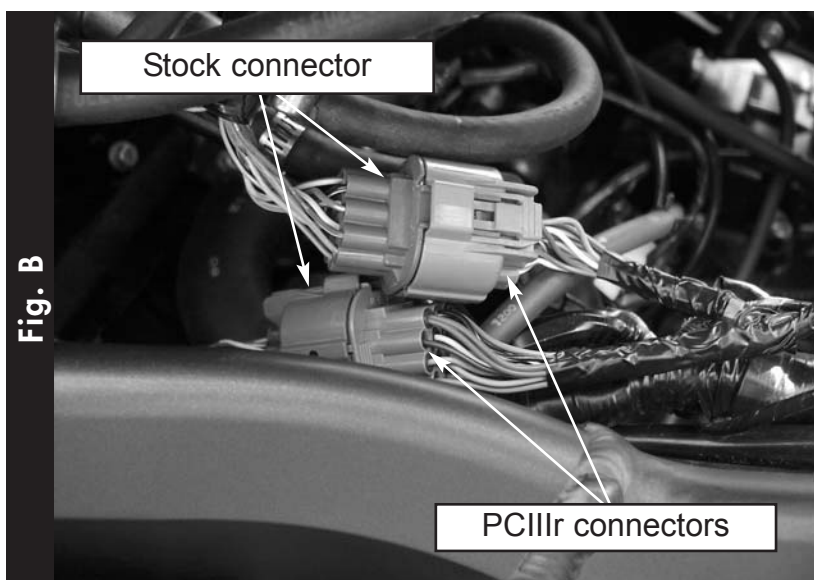

- 4 Plug the PCIII connectors in-line of the stock connector (Fig. B).

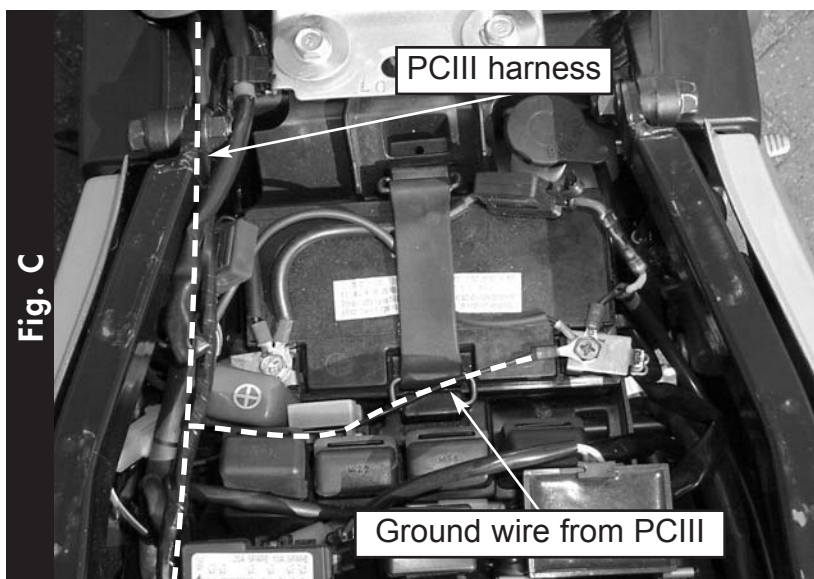

- 5 Attach the ground wire from the PCIII to the NEGATIVE side of the battery (Fig. C).

Fig. D



- 6 With the supplied self adhesive velcro, attach the PCIII onto the top of the ECU (Fig. D). Make sure to clean both surfaces first with the supplied alcohol swab.
- 7 Bolt the front of the fuel tank back down. Install the seat.