



2005-2007 Suzuki KingQuad 70Q

Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Dual lock Velcro® Strip
- 1 Alcohol Swab
- 1 Wire tap

Button Adjustment Display



Faceplate Buttons



The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com




- 1 Remove the seat.
- 2 Remove the left side cover by pushing in on the pins (Fig. A).




- Install the PCIII to the rear fender under the seat. Use the supplied velcro to hold the unit in place (Fig.B).
- 4 Route the PCIII harness towards the battery. Route the harness underneath all other wires.

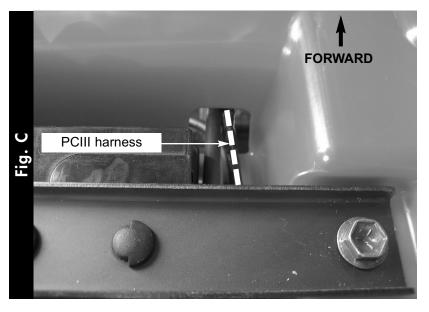


5 Route the PCIII harness under the battery bracket and through the hole in the fender (Fig. C).

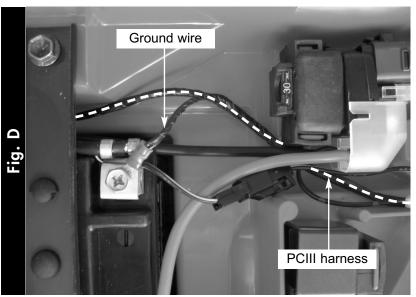


- Attach the ground wire from the PCIII to the NEGATIVE side of the battery (Fig. D).
- Route the harness to the throttle body.

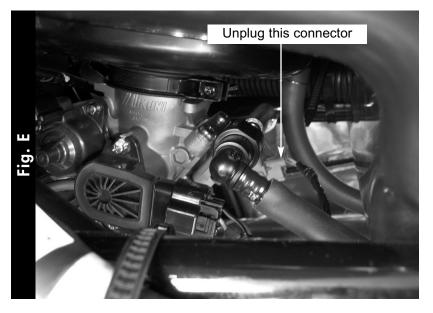


8 Unplug the stock wiring harness from the injector (Fig. E).

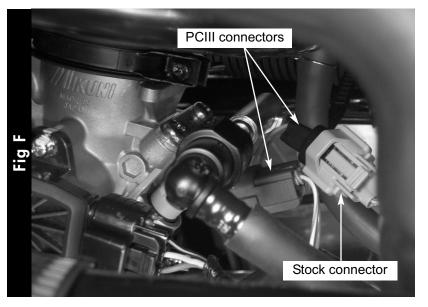

Plug the connectors from the PCIII in-line of the stock wiring harness and fuel injector (Fig.F).

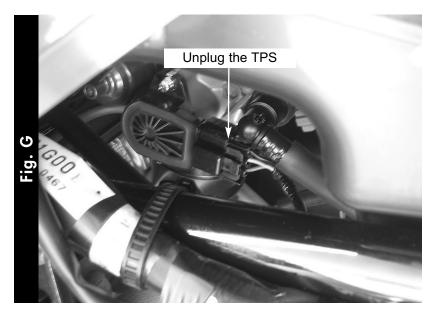

- 10 Locate the Throttle Position Sensor on the left hand side of the throttle body (Fig. G).
- 11 Unplug the stock wiring harness from the TPS and pull the harness out to gain access.

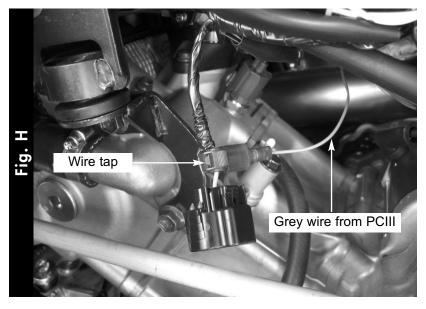

- 12 Crimp the supplied wire tap to the YELLOW wire of the stock harness (Fig. H).
- Connect the GREY wire from the PCIII to this wire tap (Fig. H).

Note: It is recommended to use dielectric grease on these connections.

- Plug the stock wiring harness back onto the TPS.
- 15 Reinstall the side cover
- 16 Reinstall the seat.