

[POWER] [COMMANDER III]

CERTIFIED **USB**

2008 Arctic Cat 700 H1 Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab
- 1 Posi tap


The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Button Adjustment Display

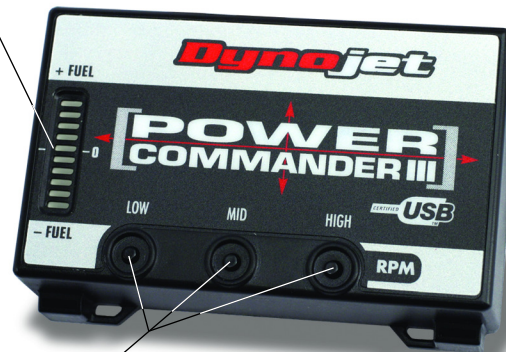


Faceplate Buttons

Expansion Port

USB Port




Fig. A

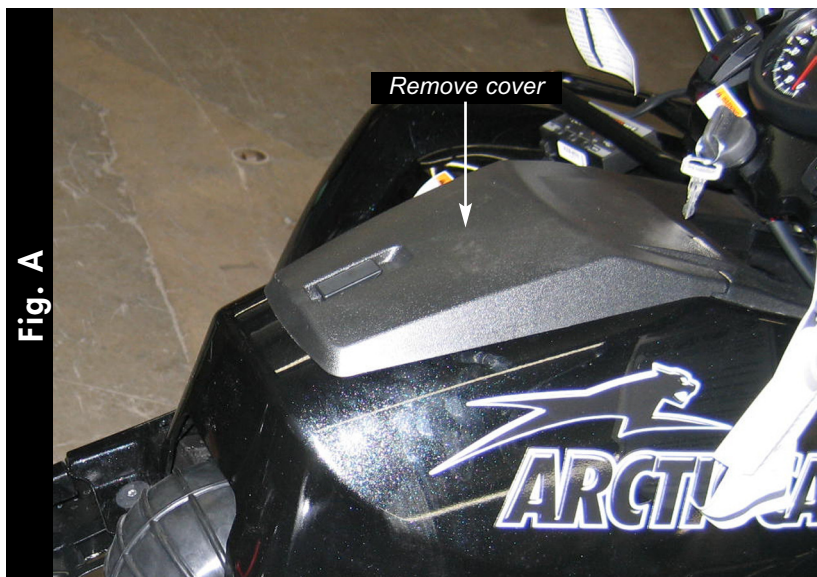


- 1 Remove the seat.
- 2 Remove the storage cover (Fig. A).

Fig. B

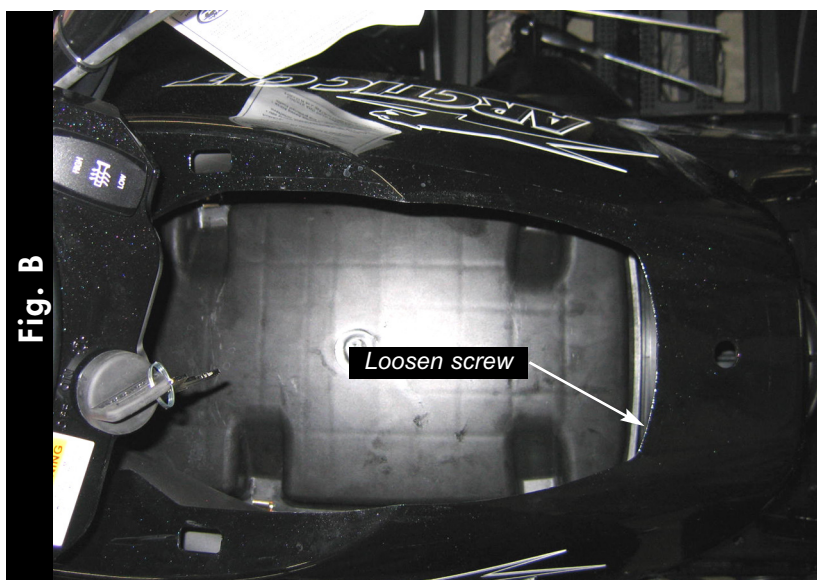


- 3 To make the injector more accessible remove the rubber intake snorkel. Loosen the clamp for the snorkel thru the opening under the storage cover (Fig. B).

Fig. C

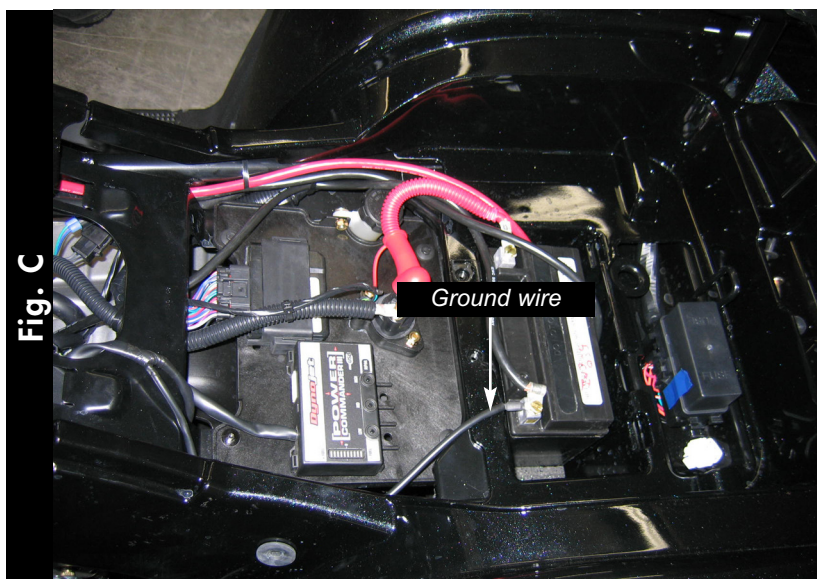


- 4 Attach the PCIII under the seat using the supplied velcro. Route the PCIII wiring harness under the seat frame and plastic shroud.
- 5 Attach the ground wire from the PCIII to the negative side of the battery (Fig. C).

Fig. D

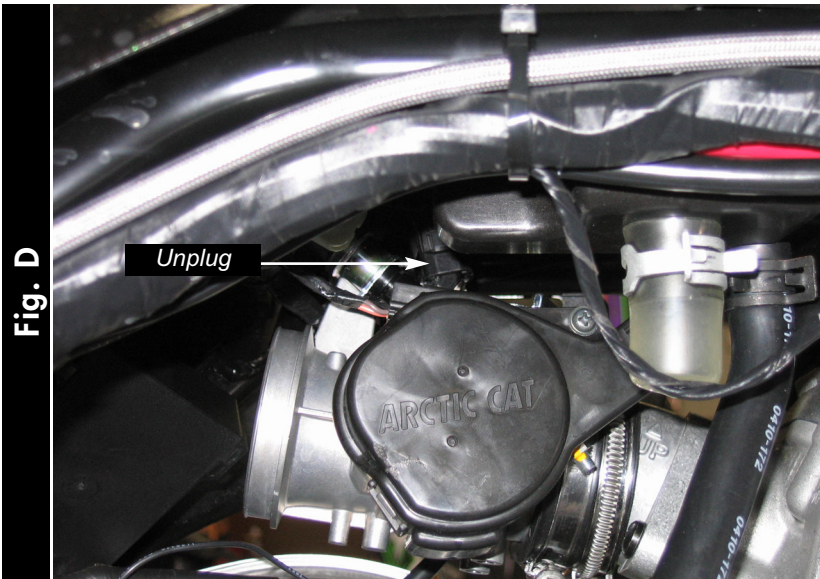


- 6 Unplug the stock wiring harness from the injector (Fig. D)
- 7 Plug the PCIII harness in-line of the stock wiring harness and injector.

Fig. D

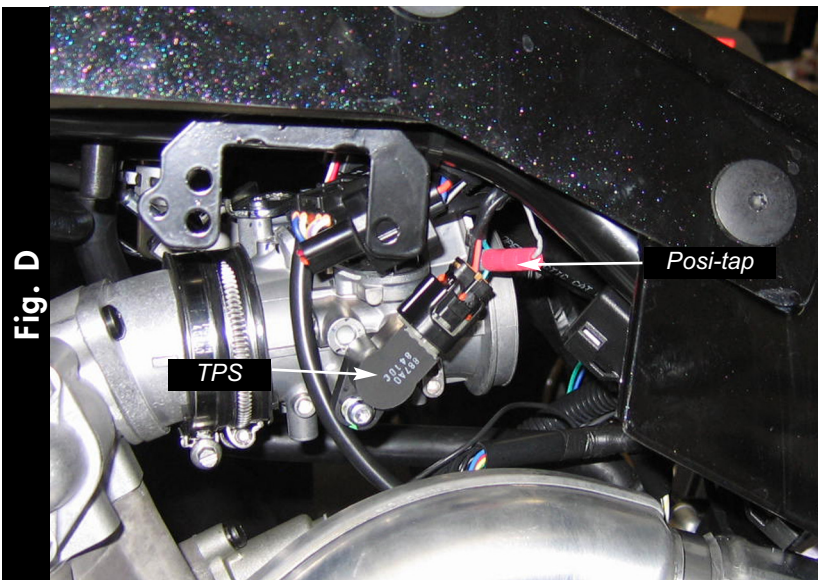

- 8 Locate the Throttle Position Sensor on the left hand side of the throttle body.
- 9 Using the supplied posi-tapconnect the GREY wire of the PCIII to the GREEN/BLACK wire of the TPS.

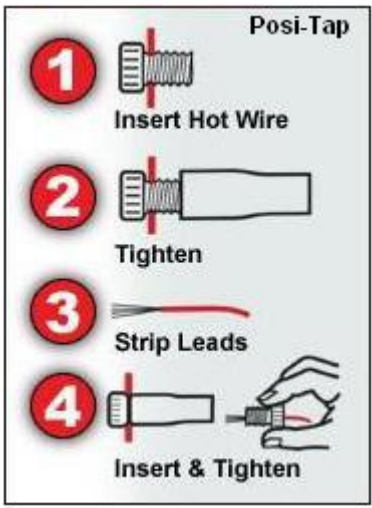

- 10 Reinstall the storage cover and seat.

For more information on how to use and adjust the PCIII go to the HELP menu in the control center software.