

# POWER COMMANDER III

CERTIFIED USB

## 2000 Ducati Monster 900 US Models Only Installation Instructions

### Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port




**The ignition MUST be turned OFF before installation!**

You can also download the Power Commander software and latest maps from our web site at:

[www.powercommander.com](http://www.powercommander.com)


**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

Fig. A

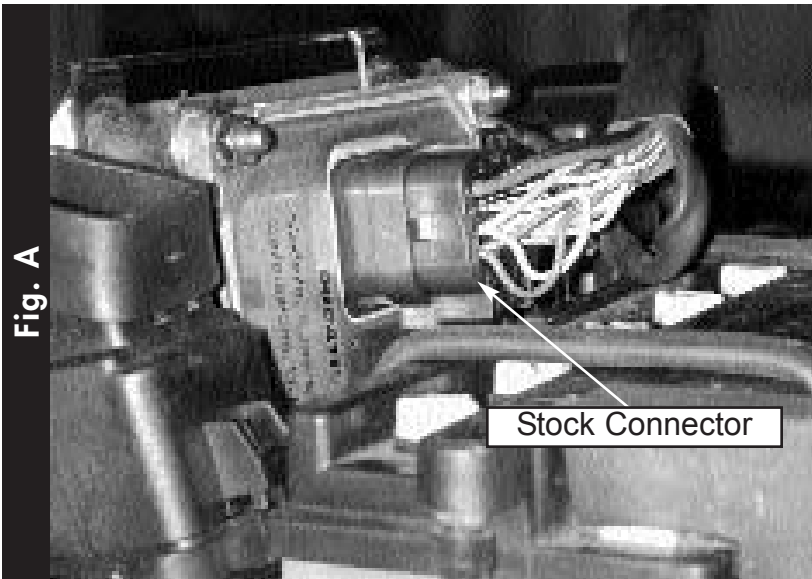


- 1 Remove the seat.
- 2 Lift fuel tank.
- 3 Unplug connector from ECU (Fig. A).

Fig. B

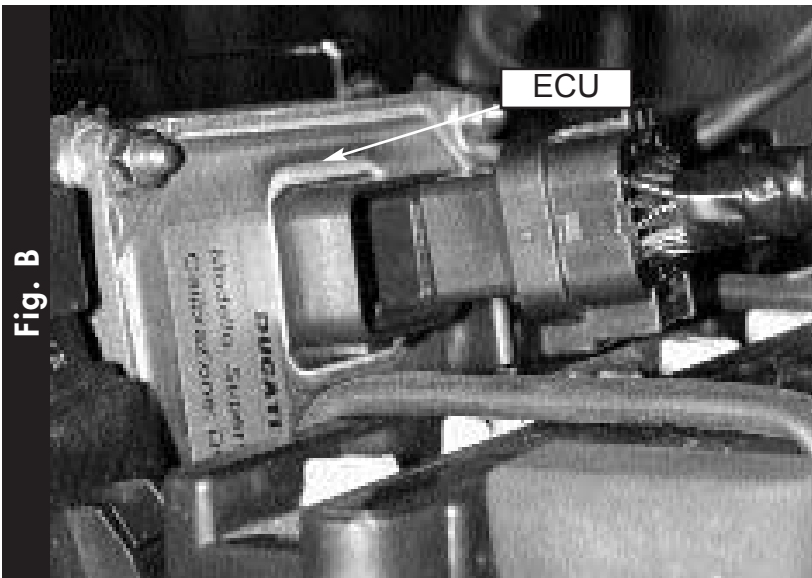

- 4 Plug male connector from PCIII into ECU (Fig. B).

Fig. C

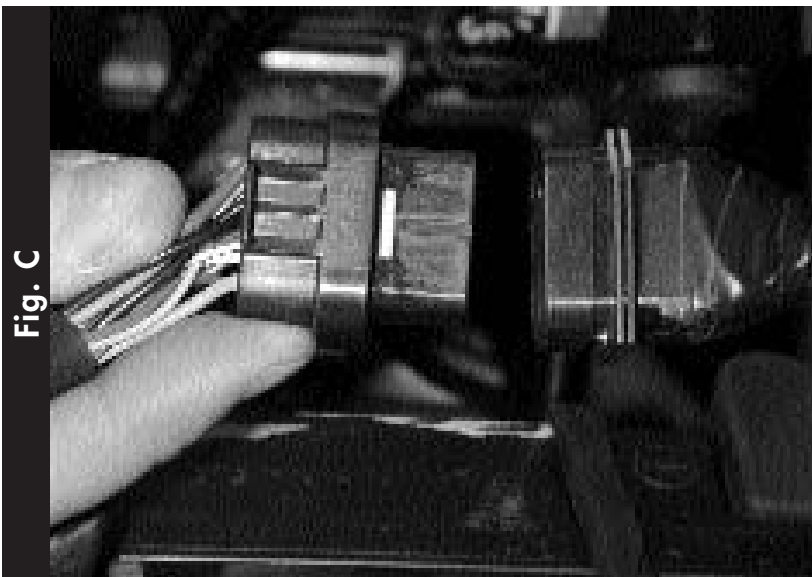

- 5 Plug female connector from PCIII into male connector from original harness (Fig. C).
- 6 Run PCIII cable under fuel tank and along frame rail to the area under the seat.

Fig. D



- 7 Mount PCIII unit to rear most area under seat using provided self adhesive velcro (Fig. D).

