

[POWER] [COMMANDER III]

CERTIFIED **USB**

2000-2001 Moto Guzzi Quota 1100 ES US Models Only Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port



The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

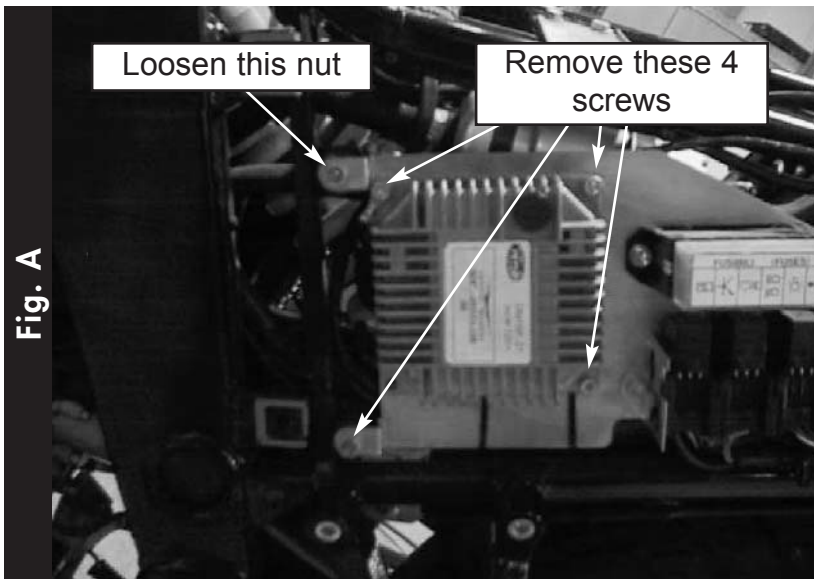


Fig. A

- 1) Remove the left hand and right hand side covers.
- 2) Remove the seat.
- 3) Remove the four allen screws that hold the ECU to the bracket. (Fig. A).
- 4) Loosen the upper left hand nut that holds the ECU bracket (Fig. A).

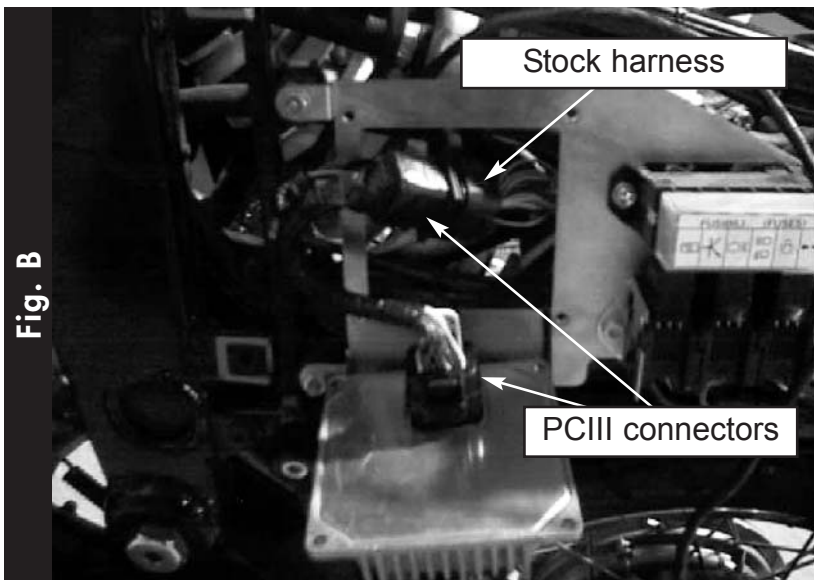


Fig. B

- 5) Route the connectors from the PCIII around the backside of this bracket (Fig. B).
- 6) Disconnect the wiring harness from the stock ECU.
- 7) Plug the female connector from the PCIII into the stock ECU (Fig. B).
- 8) Plug the male connector from the PCIII into the stock wiring harness (Fig. B).


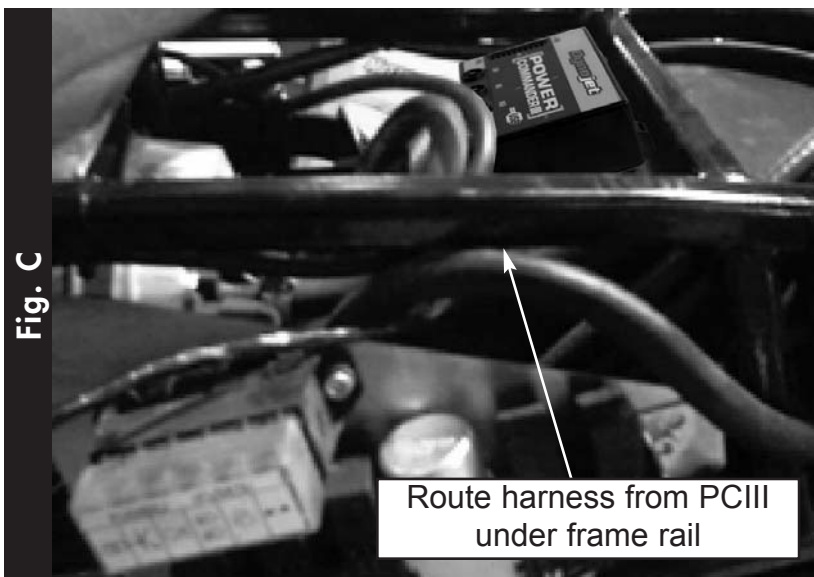


Fig. C

- 9) Route stock wiring harness and the PCIII harness away from the rear shock absorber. Route the PCIII under the frame rail (Fig. C).

Fig. D

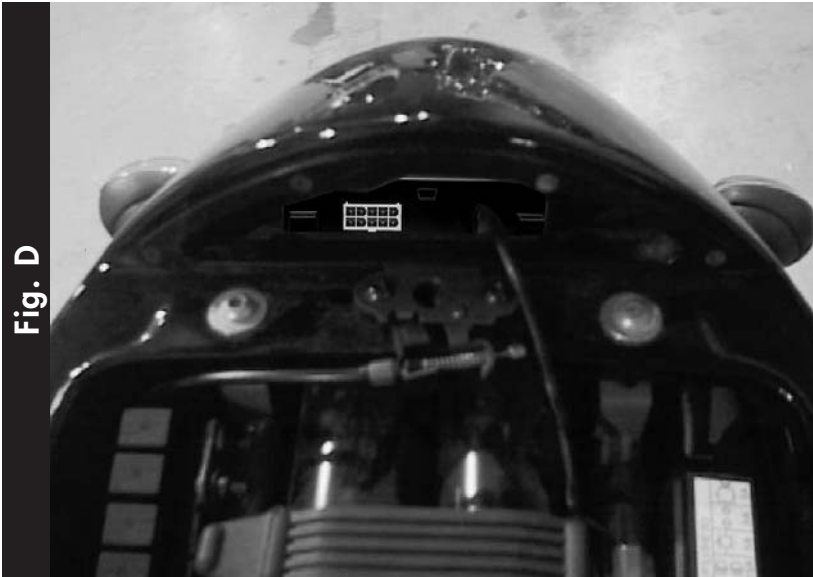

- 10) Install the PCIII to the inner rear fender using the supplied velcro (Fig. D). Make sure to first clean area with the alcohol wipe.
- 11) Reinstall the ECU to the bracket. Make sure the ground wires from the stock harness are reconnected. Tighten the bracket nut.
- 12) Reinstall main seat and side covers.