




# 2003-2005 Ducati 749

#### **Installation Instructions**

#### **Parts List**

- Power Commander 1
- 1 **USB** Cable
- 1 CD-ROM
- Installation Guide 1
- 1 **Power Adapter**
- 2 **Power Commander Decals**
- 2 **Dynojet Decals**
- 2 Velcro® Strip
- Alcohol Swab 1







### The ignition MUST be turned **OFF** before installation!


You can also download the Power Commander software and latest maps from our web site at:


www.powercommander.com





## PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89031 (800) 992-4993 www.powercommander.com

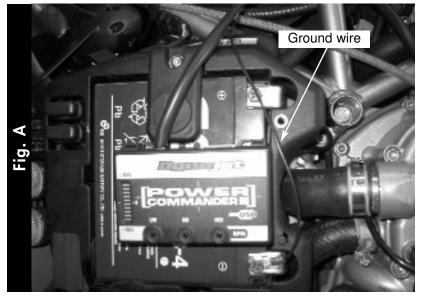




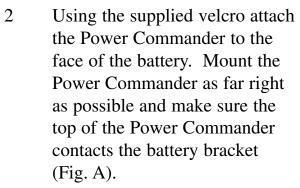



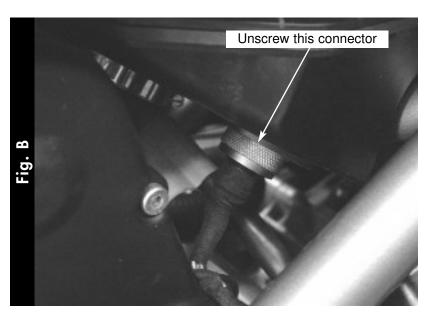

- 4 Route the wiring harness from the Power Commander under the air box and towards the right hand side of the bike.
- 5 Locate the stock wiring harness going into the bottom right hand side of the air box (Fig. B).
  Unscrew this connector.

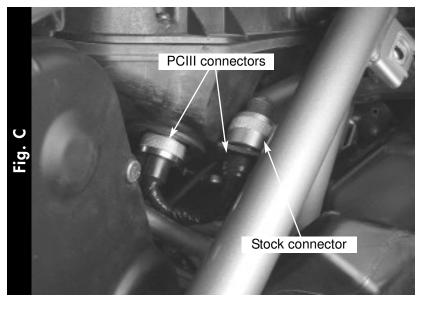

- 6 Screw the Power Commander harness in-line of the stock wiring harness (Fig.C).
- 7 Reinstall the fairing.