





## 1997-1998 Moto Guzzi Centauro

Installation Instructions



Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

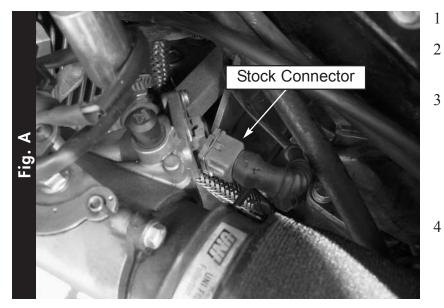

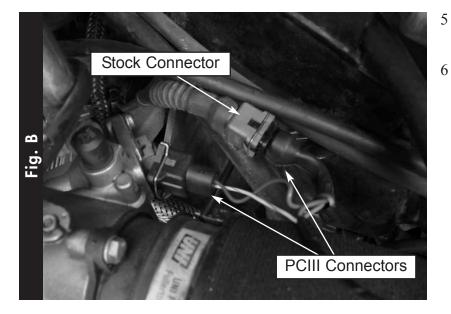


- Remove seat assembly.
- Place the PCIII in the tail section temporarily.
- Route the wiring harness from the PCIII towards each cylinder. Route the harness between the battery and the frame going under the frame rails. NOTE: It does not matter which lead goes to which injector.
  - Unplug the stock wiring harness from the injector (Fig. A).
- Plug the connectors from the PCIII inline of the stock connectors (Fig. B).
- Repeat steps 4 and 5 for the other injector.


Unplug the Throttle Position Sensor connector from the TPS on the right hand side of the bike (on top of the throttle body) (Fig C).

7



Stock Connector

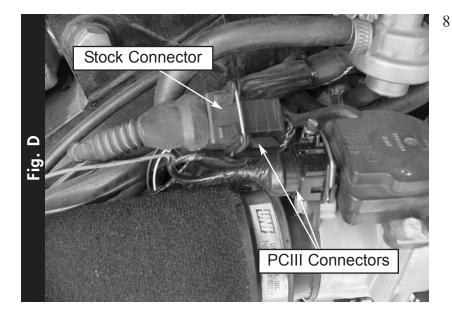

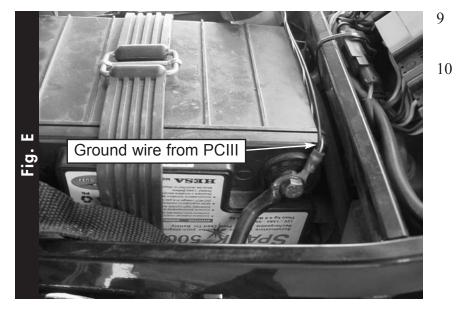

Plug the TPS connectors from the PCIII in-line of the stock connectors (Fig. D).

- Ground the wire from the PCIII to the negative side of the battery (Fig. E).
- Mount the PCIII in one of two places. Either in the tool tray area or between the frame and the battery.