

# **[POWER] COMMANDER III**

CERTIFIED **USB**

## **2005 Benelli TNT 1130** Installation Instructions

### **Parts List**

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

**The ignition MUST be turned OFF before installation!**

You can also download the Power Commander software and latest maps from our web site at:

[www.powercommander.com](http://www.powercommander.com)

Expansion Port


USB Port




**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**



- 1 Remove the seats
- 2 Remove the fuel tank.
- 3 Mount the Power Commander on top of the battery using the supplied velcro. Use the alcohol swab to clean both surfaces before attaching (Fig. A)
- 4 Attach the ground wire of the PCIII to the negative side of the battery.

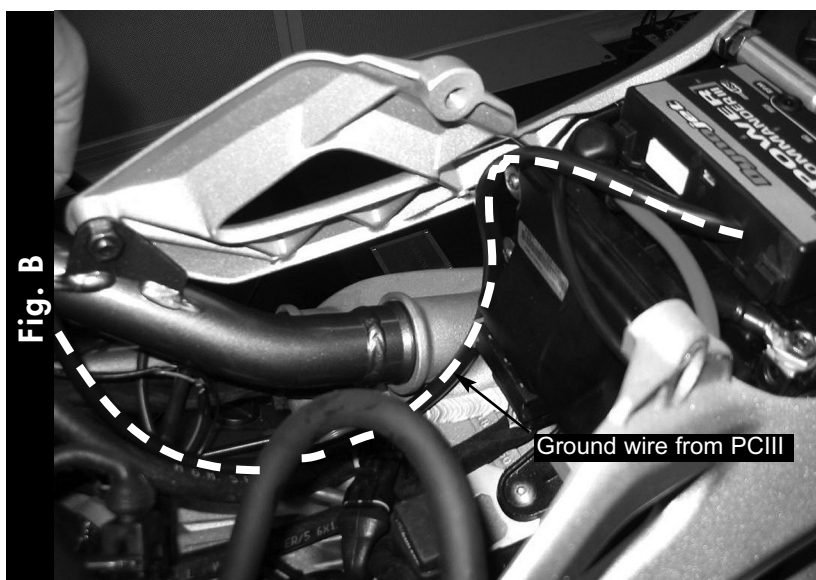

- 5 Route the Power Commander harness along the right side of the ECU and the subframe and go towards the throttle bodies (Fig. B).

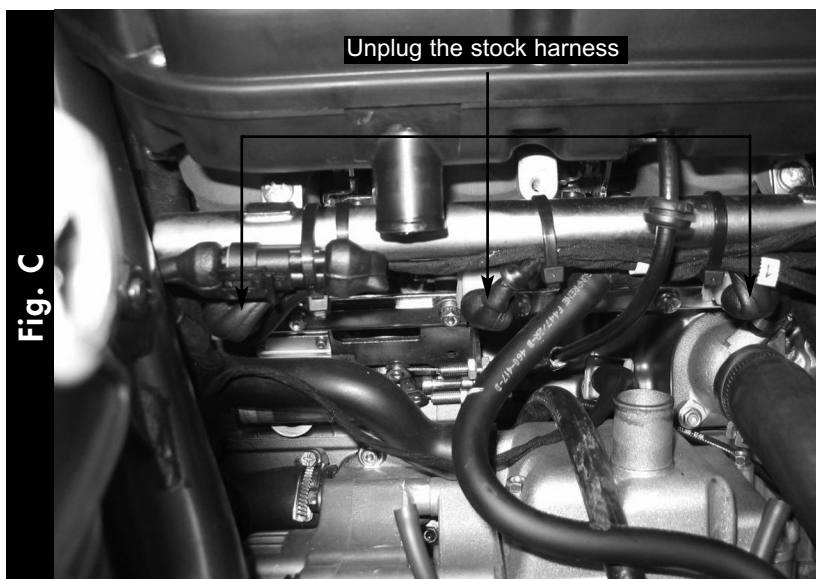

- 6 Unplug the stock wiring harness from each injector (Fig. C).

Fig. D



- 7 Plug the PCIII connectors in-line of the stock wiring harness and injectors (Fig. D).  
ORANGE - right cylinder  
YELLOW - middle cylinder  
GREEN - left cylinder

Fig. E



- 8 Locate the Throttle Position Sensor connector. This is located on the right hand side of the throttle bodies (Fig. E).
- 9 Unplug this connector and plug the connectors from the PCIII in-line of the stock wiring harness and TPS.
- 10 Install the fuel tank. Make sure that the PCIII harness does not get pinched by the fuel tank.
- 11 Install the seats.