

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105  
 North Las Vegas, NV 89031  
 TEL: 702-399-1423  
 FAX: 702-399-1431  
 8am-5pm Pacific Time  
 Monday through Friday

Website Address  
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.




**E3321.002**

European Models Only

*1988-89 Suzuki GSX600F*

**Stage 3**

For mildly tuned machines using individual filters or velocity stacks. May also be used with a good aftermarket exhaust system  
 K&N filter #RC-1824

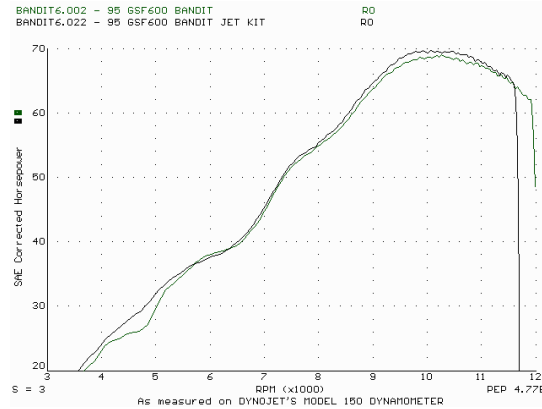

*This graph shows a typical gain with a Dynojet jet kit.*

**WARNING**

**NO SMOKING!  
 NO OPEN FLAME!  
 WHILE INSTALLING  
 YOUR DYNOJET KIT**

**Parts List**

4	Main Jets	DJ132
4	Main Jets	DJ136
4	Slide Springs	DSP007
4	Fuel Needles	DNO321
4	Adjusting Washers	DW0001
4	E-clips	DE0001
1	Main Air Jet Drill	DD #55

## STAGE THREE INSTRUCTIONS

**DYNOJET**

**E3321.002**

1. Remove the vacuum slide from the carbs. Remove the stock needles & spacers, noting the order of assembly (Fig. A).
2. Install the Dynojet needles on groove #3, using all stock spacers. Install the Dynojet washers above the E-clip.
3. Install the Dynojet slide springs in place of the stock slide springs.
4. Remove the stock main jets and replace with the Dynojet main jets provided. If you are running the stock exhaust use the DJ132 main jets, if you are running an after-market header or slip-on with high flowing baffle, use the DJ136 main jets. Be sure that the jets you are changing are the main jets.
5. Locate the main air jet (Fig. B) with the drill bit provided (DD #55), drill the main air jet. Greasing the flutes will keep all of the shavings from getting into the carb.
6. Locate the fuel mixture screw (Fig. C). Carefully turn mixture screws clockwise until they seat, turn out until you find until you find your best idle. Our base setting is 3 turns.

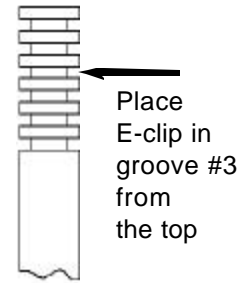


Fig. C

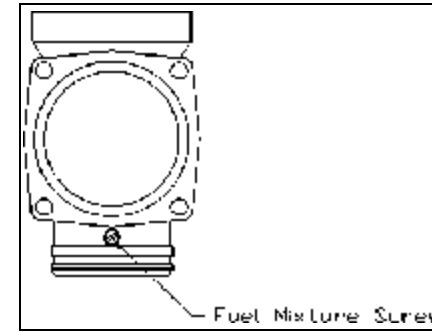


Fig. A

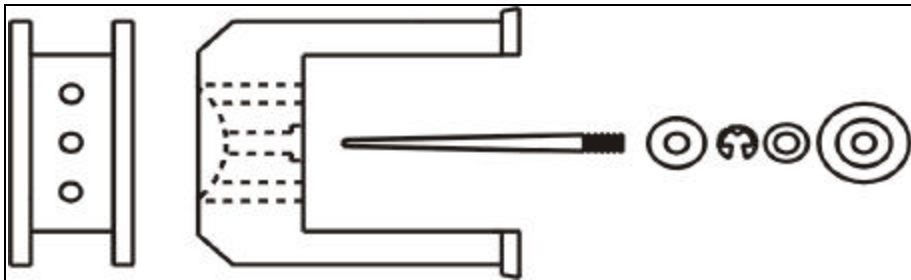


Fig. B

