



1997-2001 Suzuki TL1000S

Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro[®] Strip
- 1 Alcohol Swab

Button Adjustment Display





The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:


www.powercommander.com



PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com





2 Hold the front of the fuel tank up using the prop rod located in the trunk area.

3 Remove the air box.


4 Lay the PCIII in the tail section.

Solute the PCIII harness under the subframe and go towards the front of the bike. Route the PCIII harness under the battery bracket on the left hand side.

6 Disconnect the stock wiring harness from the throttle bodies (Fig. A).



Plug the connectors from the PCIII inline of the stock wiring harness and throttle bodies (Fig. B).

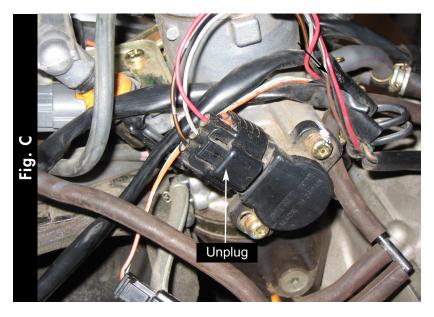

Unplug the stock wiring harness from the Throttle Position Sensor (Fig.C)

8

This connector is located on the left hand side of the throttle bodies.



Plug the PCIII connectors in-line of the stock wiring harness and TPS (Fig. D).



10 Attach the ground wire from the PCIII to the negative side of the battery (Fig.E).



- Install the PCIII unit on top of the stock ECU. Use the supplied velcro to attach the unit. Make sure to clean both surfaces with the alcohol swab before attaching.
- Reinstall the air box and fuel tank.