



2002-2007 Yamaha TDM900

Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- Alcohol Swab

Button Adjustment Display



The ignition MUST be turned OFF before installation!


You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com




PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

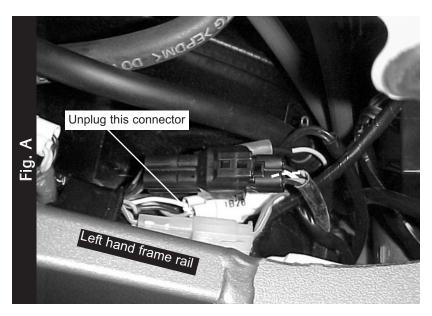

- 1 Remove the seat.
- 2 Prop the front of the fuel tank up.
- 3 Unplug the stock 4 pin white connector. This connector is located on the left hand side of the bike under the fuel tank. (Fig. A).

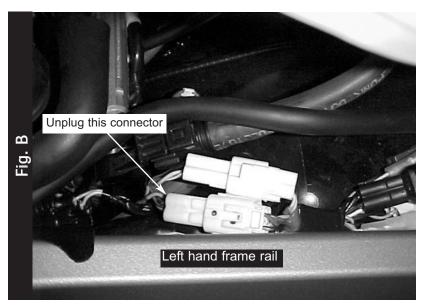

4 Unplug the stock 3 pin white connector. This connector is located on the left hand side of the bike under the fuel tank. (Fig. B).

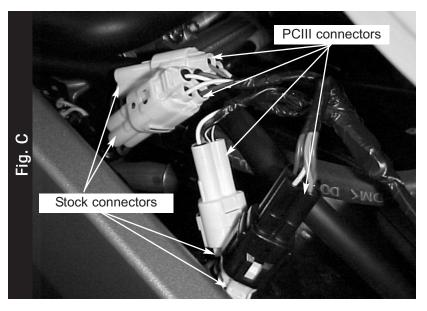

5 Plug the connectors of the PCIII in-line of the stock connectors (Fig. C).



Attach the black ground lead from the PCIII to the negative side of the battery (Fig. D).



Install the PCIII in the tail section using the supplied velcro. Make sure to use the supplied alcohol swab to clean both surfaces before attaching the unit.