

[POWER] [COMMANDER III]

GENUINE **USB**

2003-2005 Yamaha FJR 1300 Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port




The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com


PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Fig. A

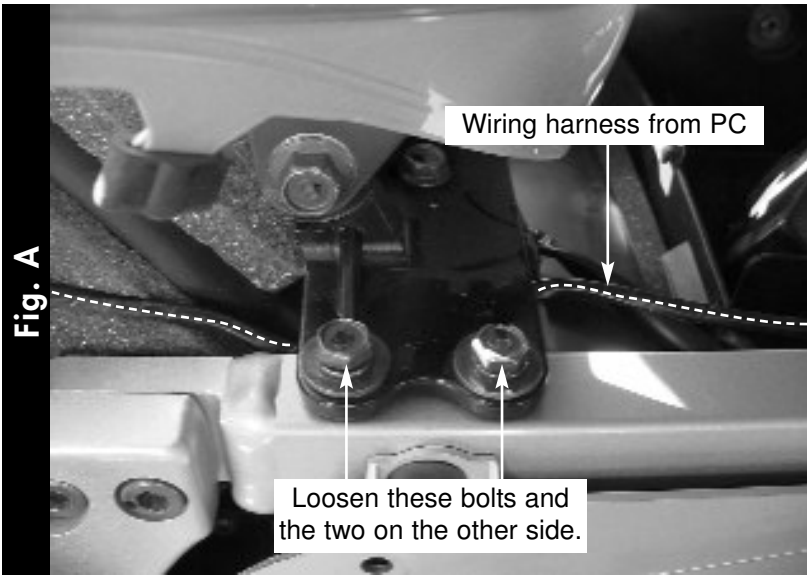


- 1 Remove the main seat.
- 2 Lift the front of the fuel tank up.
- 3 Place the PCIII in the vicinity of the tool kit temporarily.
- 4 Route the wiring harness from the PCIII towards the front of the air box on the left hand side of the bike. Route the harness under the tab for the tool tray (Fig. F). Route the harness between the fuel tank and the frame (Fig. A). The bracket for the fuel tank will need to be loosened to fit the connectors through.

Fig. B

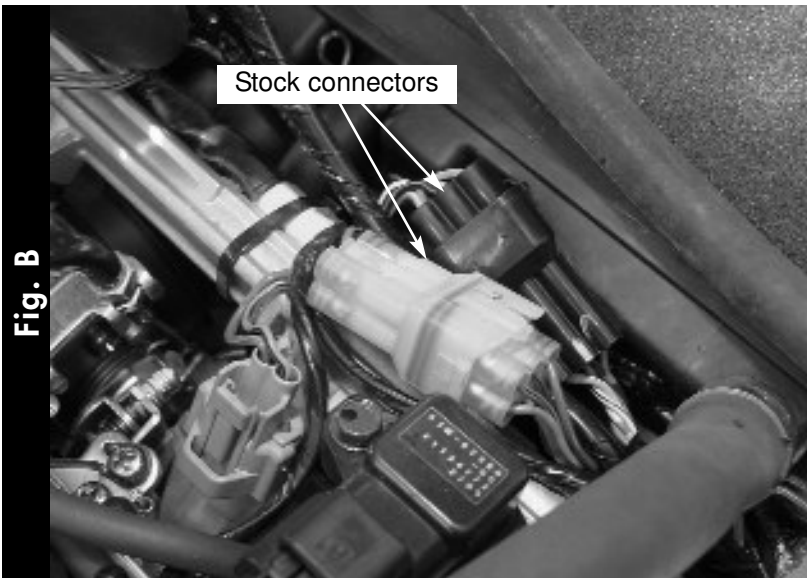


- 5 Unplug the connectors shown in Fig. B. These connectors are located between the air box and the throttle bodies.

Fig. C

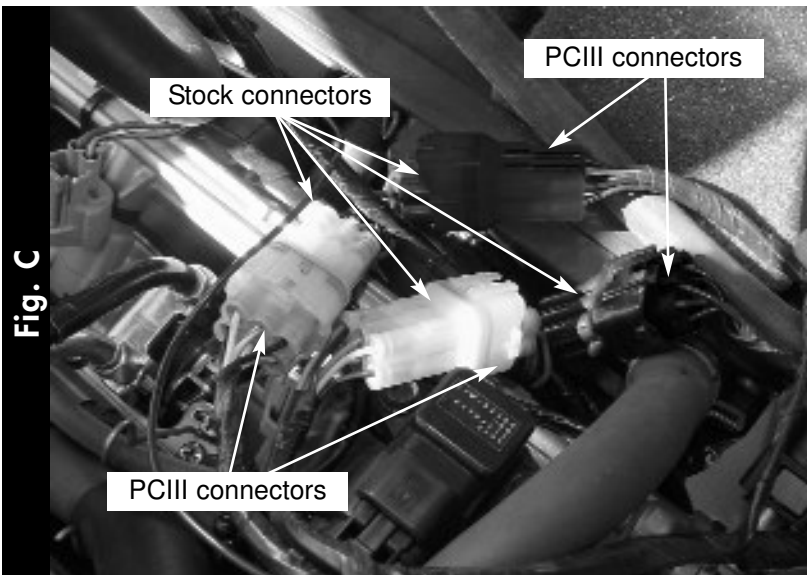


- 6 Plug the connectors from the PCIII in-line of the stock wiring harness (Fig. C) matching the colors of the connectors.

Fig. D

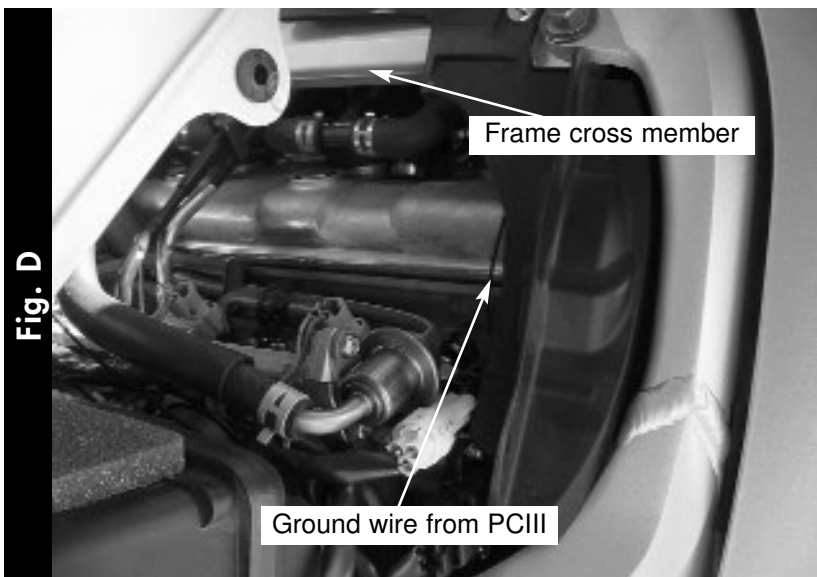


- 7 Route the ground wire to the right hand side of the throttle bodies. Route wire under frame cross member (Fig. D). Route the wire above the radiator and towards the battery.

Fig. E

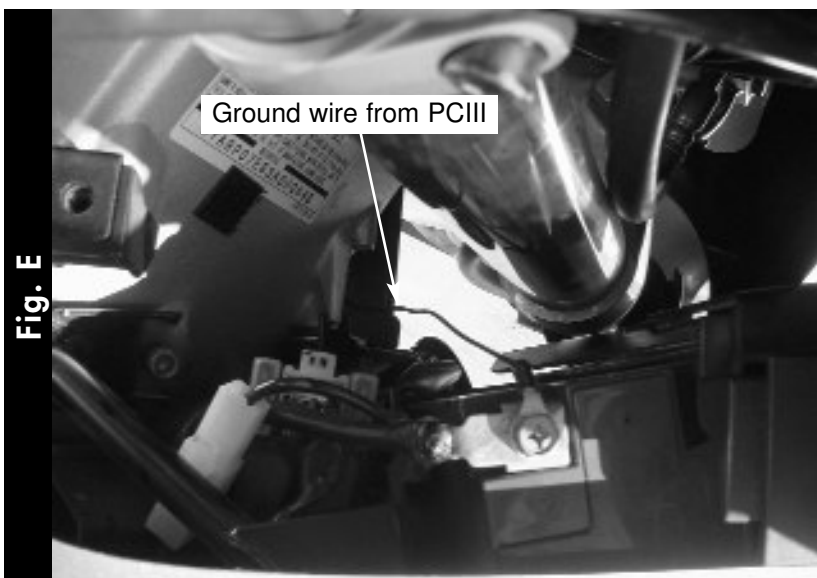

- 8 Attach the ground wire to the negative side of the battery (Fig. E).

Fig F

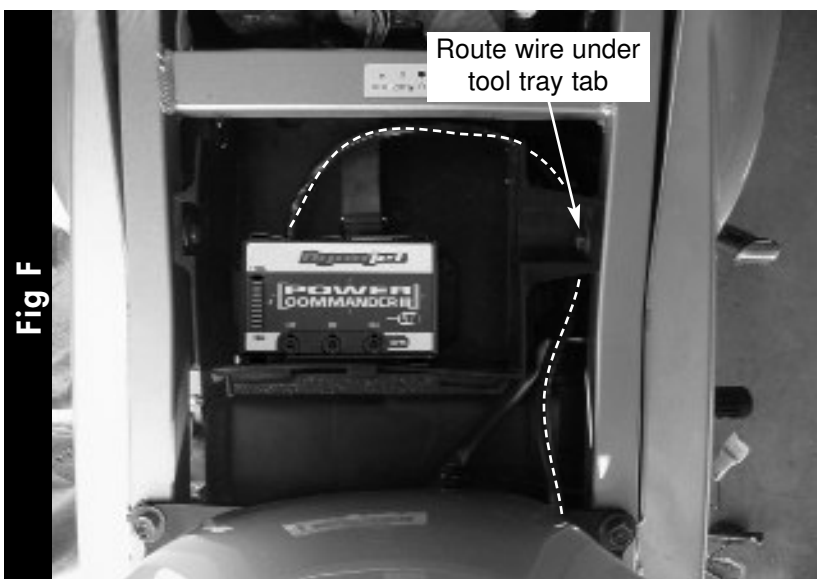

- 9 Install the PCIII in the tool kit tray (Fig. F) using the supplied velcro. Make sure to clean both surfaces with the supplied alcohol swab before attaching velcro.
- 10 Make sure all wires are routed so that they will not get pinched.
- 11 Reinstall the fuel tank and seats.