

[POWER] [COMMANDER III]

CERTIFIED **USB**

1997-2005 Triumph T595/955i Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab
- 1 Wire tap

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port






The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:


www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

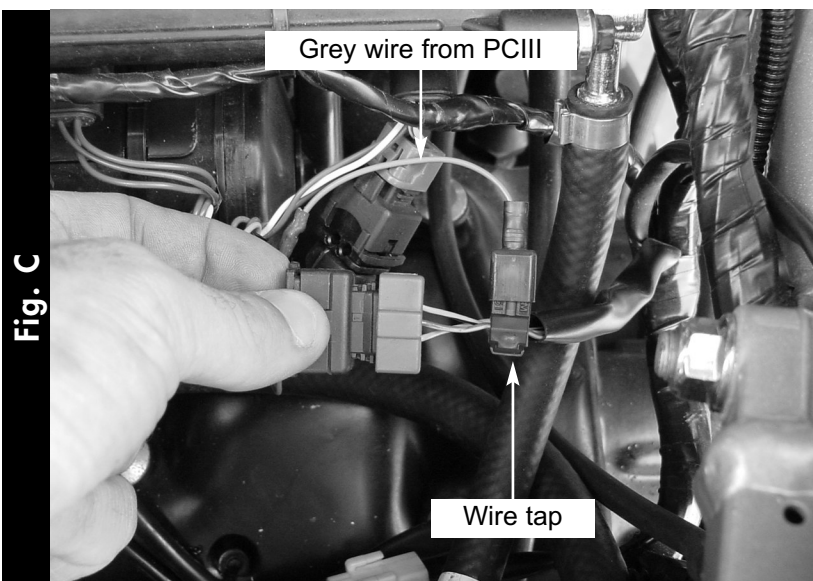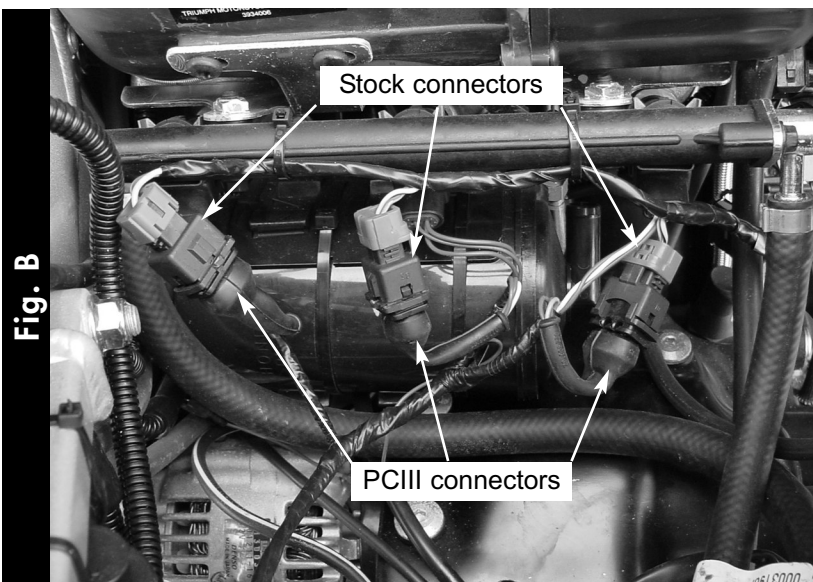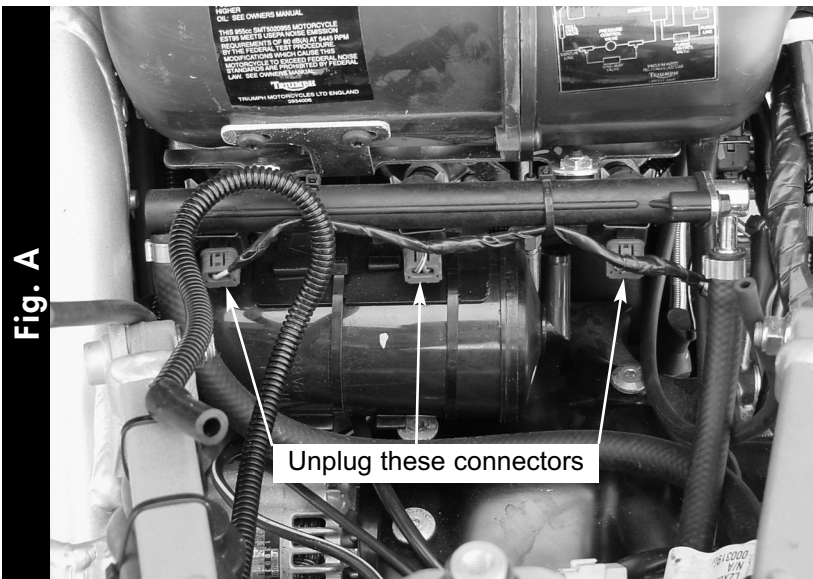

- 1 Remove the seat.
- 2 Remove the fuel tank
- 3 Disconnect the wiring harness from the injector rail. Remove the spring clips from each connector to remove. (Fig. A).
- 4 Connect the male end from the PCIII to the stock female end that you have just removed from the injector rail. Reinstall the spring clips onto the stock connectors (Fig. B).

Align the PCIII connector to the stock wiring harness as shown below. The square edges of the PCIII connector align with the spring clip side of the stock wiring harness

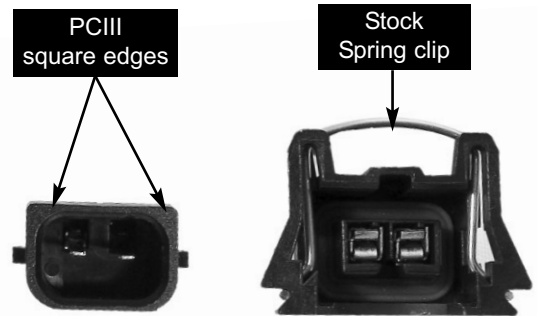

- 5 Plug the female end connectors of the PCIII to the injector rail (Fig. B). Start with the ORANGE colored wire on #1(left) and works towards the right.

6 **For 97-2001 models.**

Disconnect the TPS connector on the right hand end of the throttle bodies by removing the spring clip. Locate the green wire with the yellow tracer. Connect the wire tap to this wire.

For 2002-2005 models.

The TPS is located on the left hand side of the throttle bodies. Locate the YELLOW wire and connect the wire tap to it.

Fig. D



- 7 Plug the grey wire from the PCIII into this connector (Fig. C). It is recommended to use dielectric grease on these connections. Reconnect the TPS connector and reinstall the spring clip if needed.
- 8 Route the PCIII and wiring harness along the left hand side of the frame and under the crossover rail for the subframe.
- 9 Attach ground wire from PCIII to negative terminal of the battery.
- 10 Attach the PCIII to the inner rear fender using the supplied velcro (Fig. D). Make sure to clean both surfaces with the alcohol swab before attaching.
- 11 Reinstall the fuel tank and the seat.