

[POWER] [COMMANDER III]

CERTIFIED **USB**

2006-2007 Triumph Daytona 675 Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port




The ignition MUST be turned OFF before installation!


You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com


PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

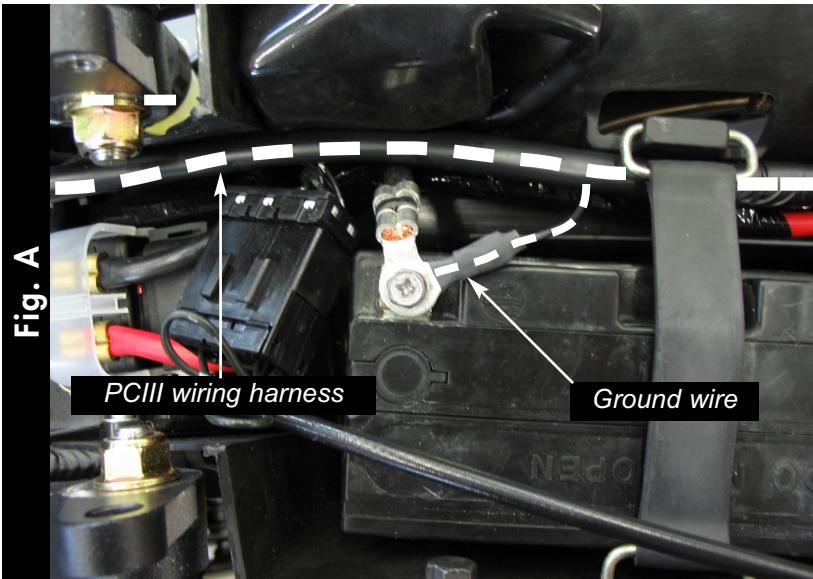

- 1 Remove the main seat.
- 2 Prop the fuel tank up.
- 3 Lay the PCIII on top of the battery. Route the wiring harness from the PCIII under the fuel tank and go towards the engine.
- 4 Attach the ground wire from the PCIII to the negative side of the battery (Fig. A).

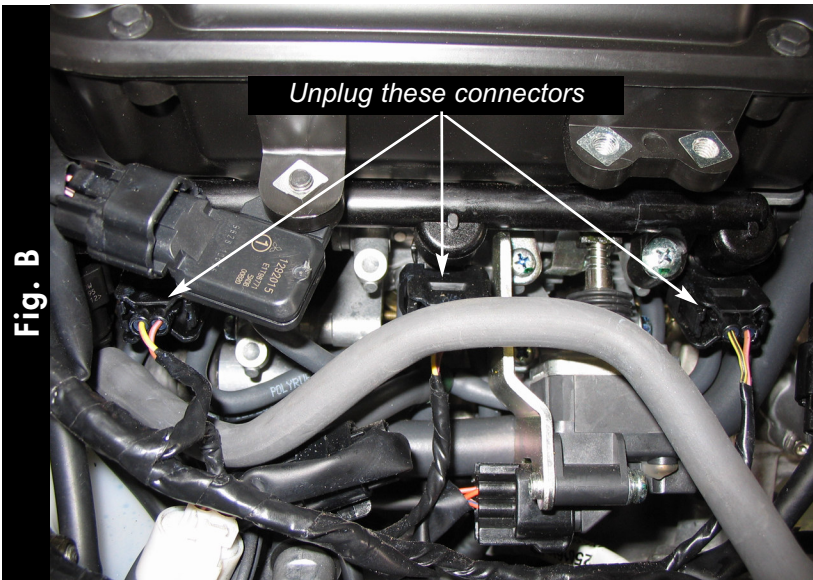

- 5 Unplug the stock wiring harness from each of the injectors (Fig. B).

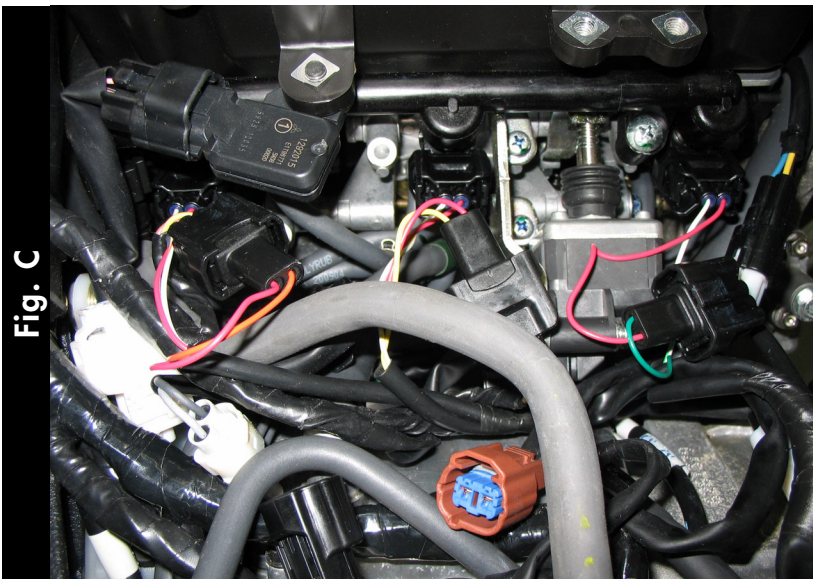


- 6 Plug the connectors from the PCIII in-line of the stock injectors and the stock wiring harness (Fig.C).


ORANGE - cylinder #1

YELLOW - cylinder #2


GREEN - cylinder #3

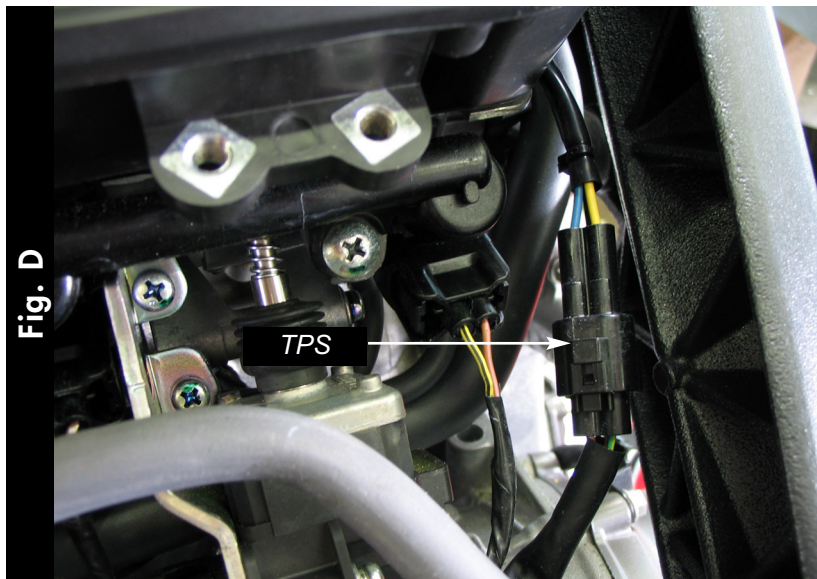

7. Locate the Throttle Position Sensor which is located on the right hand side of the throttle bodies. Unplug this connector (Fig. D).

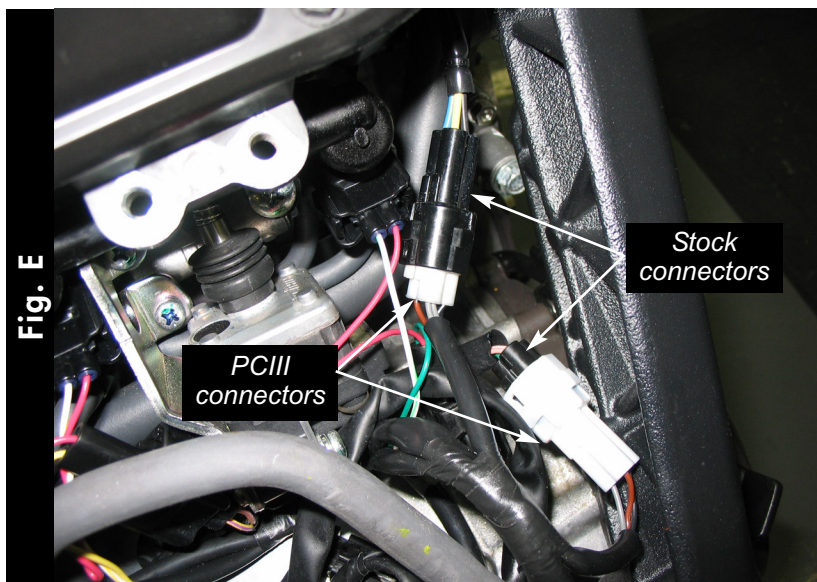

8. Plug the 3 pin connectors from the PCIII in-line of the stock wiring harness and the TPS (Fig. E).

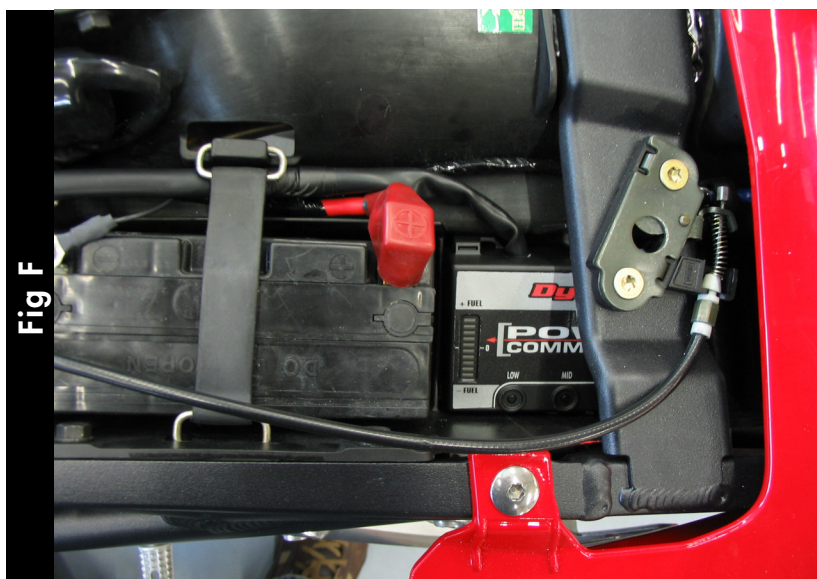

9. Install the PCIII in the pocket next to the battery. Use can use the supplied velcro to secure the unit in place if desired.
10. Lower the fuel tank back into position making sure none of the wires get pinched or damaged.