

# [POWER] [COMMANDER III]

CERTIFIED **USB**

## 2000-2001 Polaris Victory V92SC Installation Instructions

### Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port




**The ignition MUST be turned OFF before installation!**

You can also download the Power Commander software and latest maps from our web site at:

[www.powercommander.com](http://www.powercommander.com)


**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

Fig. A

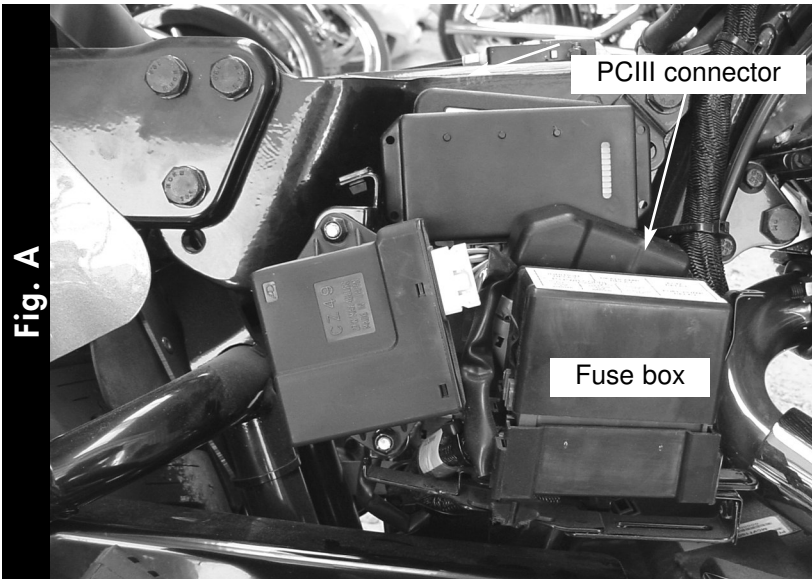

- 1 Remove the main seat.
- 2 Remove right hand side cover by removing the two zeus fasteners.
- 3 Disconnect the wiring harness from the ECU.
- 4 Plug the female connector from the PCIII into the stock ECU.
- 5 Plug the male connector from the PCIII into the stock wiring harness.

Fig. B

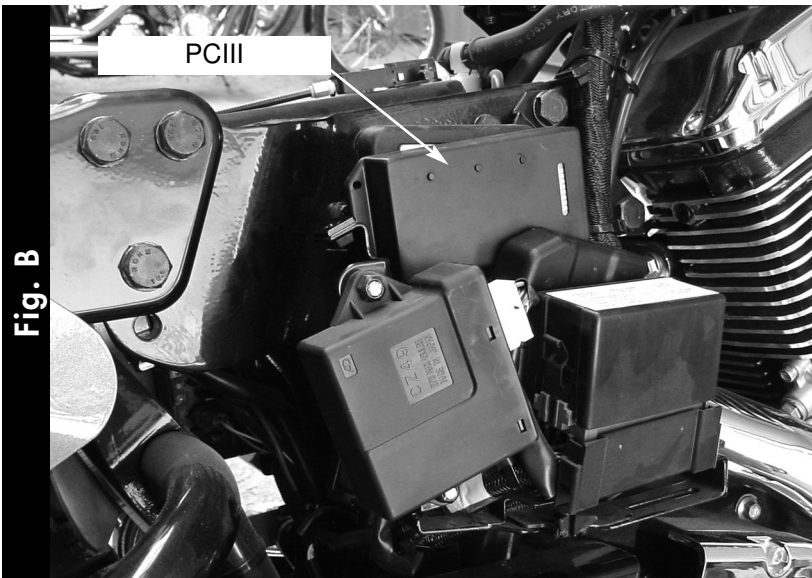

- 6 Route the PCIII wiring harness and stock connector in between the ECU and the fuse box.
- 7 Using the supplied velcro attach the PCIII inside the box as shown in Fig. B.
- 8 Reinstall the right hand side cover.
- 9 Reinstall the main seat.