

POWER COMMANDER FC

2009-2013 Suzuki Boulevard
C50/C50 SE/M50

Installation Instructions



Parts List

- 1 Power Commander FC
- 1 USB Cable
- 1 Installation Guide
- 2 Dynojet Decals
- 2 Velcro
- 1 Alcohol swab


**THE IGNITION MUST BE TURNED
OFF BEFORE INSTALLATION!**

YOU CAN ALSO DOWNLOAD THE PCFC
CONTROL CENTER SOFTWARE AND
LATEST MAPS FROM OUR WEB SITE AT:
www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

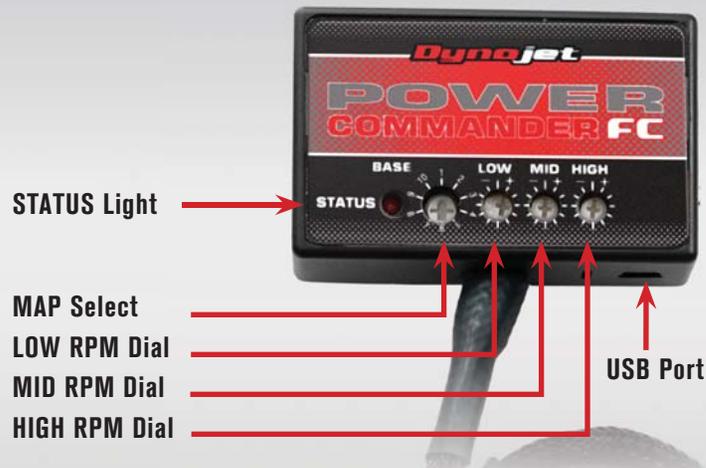

Position	Note
Position 1	2009-2013 Suzuki C50 Stock exhaust Stock air filter

SELECTING THE MAP POSITION

The Dynojet Power Commander Fuel Controller (PCFC) comes loaded with up to ten maps. Using a #1 Phillips screwdriver, turn the map select dial to toggle between the loaded maps. Refer to the map position table for the maps included in your PCFC.

USING THE RPM RANGE DIALS

The Low, Mid, and High RPM Dials refer to the RPM range, in thirds, of your vehicle. Each dial allows +/- 10% fuel adjustment on top of what fuel changes are done in the map. With the dial facing straight up, there is no additional fuel change.

For example, if your vehicle revs to 6000 RPM:

- The low RPM dial will adjust 0-2000 RPM
- The mid RPM dial will adjust 2001-4000 RPM
- The high RPM dial will adjust 4001-6000 RPM

USING PCFC CONTROL CENTER

Take your tuning to the next level with the PCFC Control Center software.




- 1 Using your web browser, navigate to www.powercommander.com.
- 2 Click Enter Race Ready.
- 3 Click Downloads.
- 4 Click Access Downloads for Power Commander FC.
- 5 Click the PCFC software Download button.
- 6 Open the zip folder.
- 7 Double-click the install file and follow the on-screen instructions to install the PCFC Control Center software. The PCFC Control Center software and maps will be stored in C:\Program Files\PCFC Control Center.
- 8 Return to the Downloads or Home page where you can enter the make, model, and year of your bike to check for and download additional maps.

LOADING ADDITIONAL MAPS

- 1 Connect the USB cable from the computer to the PCFC. Verify the cable is fully seated in the PCFC.
- 2 Run the Control Center software by double-clicking the program icon installed on your desktop or on your start menu.
- 3 Click Open Map File and select a map file.
- 4 Click Send Map. You can send the map to any of the ten map positions.

ALTERING MAPS USING SOFTWARE


The values in the map represent a percentage of fuel change over stock. A value of 10 in the map indicates at that throttle position and RPM range the vehicle will be 10% richer than stock. If the value is -10, then it would be 10% leaner than stock. You have the ability to fine tune your fuel curve by altering these values. The Control Center software allows a value of +250 to -100 in each cell.

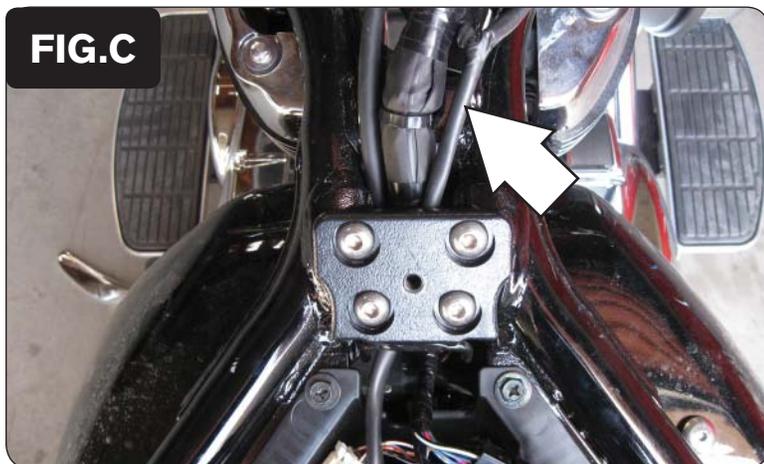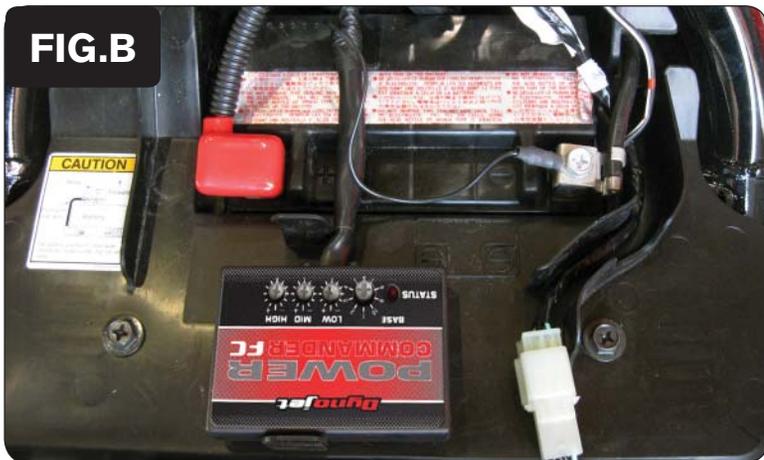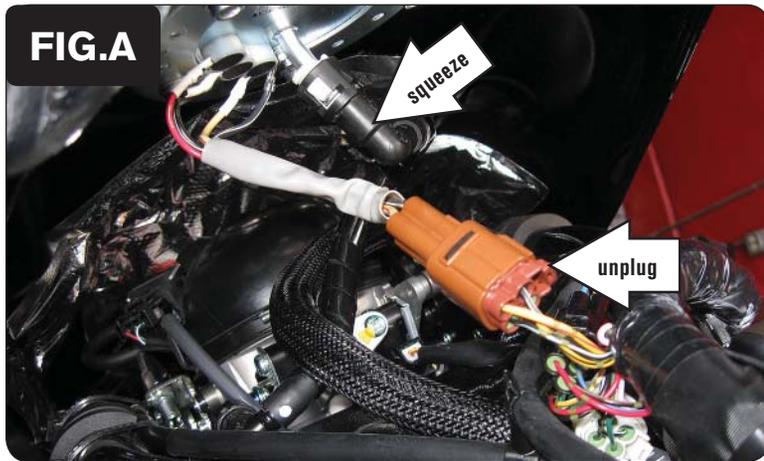

- 1 Remove the main seat and the passenger seat.
- 2 Remove the center gauge cluster
- 3 Remove the fuel tank. To remove the tank unplug the fuel pump connector and fuel line as shown in Figure A.

- 4 Using the supplied velcro, secure the PCFC to the battery tray as shown in Figure B.
Make sure to clean both surfaces with the alcohol swab before attaching.
- 5 Attach the ground wire from the PCFC to the negative side of the battery as shown in Figure B.


- 6 Route the PCFC harness underneath the frame crossover as shown in Figure C.
It may be necessary to unbolt the bracket to fit the PCFC connectors underneath.

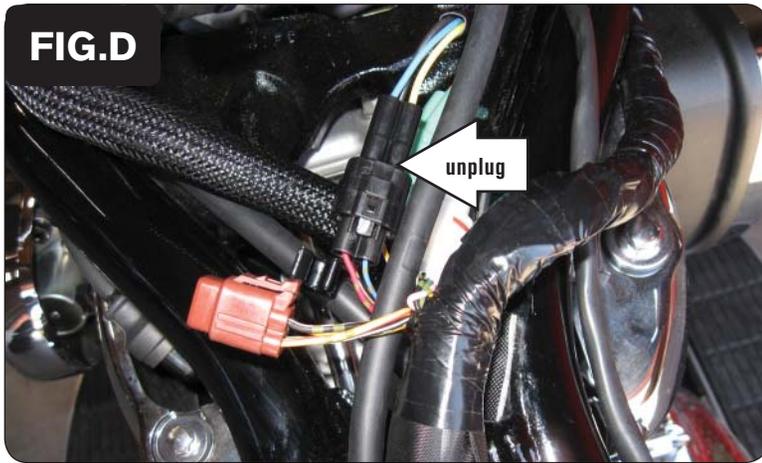


- 7 Locate the Throttle Position Sensor (TPS) connector as shown in Figure D.
This is a black 3-pin connector located on the right hand side of the frame next to the main wiring harness and fuel pump connector.
- 8 Unplug the TPS connector.



- 9 Attach the white connectors from the PCFC to the TPS connector and main wiring harness as shown in Figure E.
Note: There are two other sets of connectors that these can be plugged into. Make sure you use the black connectors.

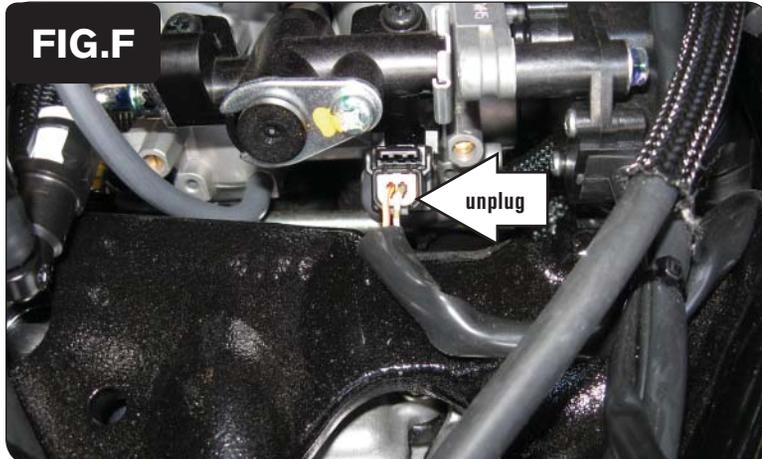


- 10 Unplug the stock wiring harness from the rear injector as shown in Figure F.

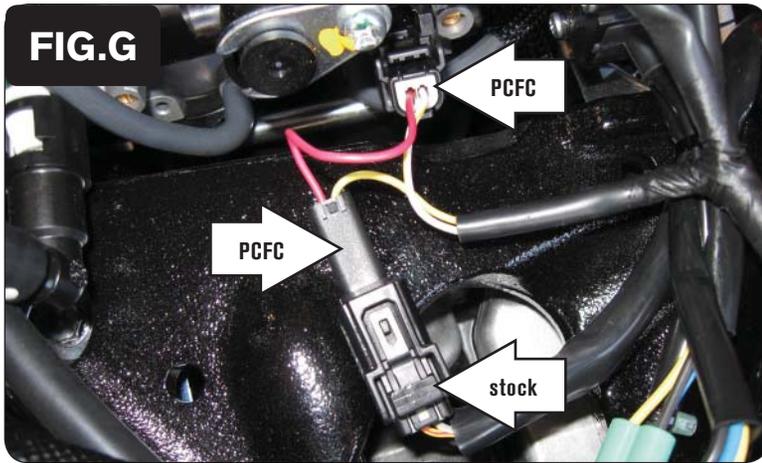


- 11 Attach the yellow colored wires from the PCFC to the injector and wiring harness as shown in Figure G.



- 12 Loosen the clamp securing the intake duct to the throttle body. Lift up on the intake duct so the PCFC harness can be routed underneath this duct and in front of the throttle body as shown in Figure H.

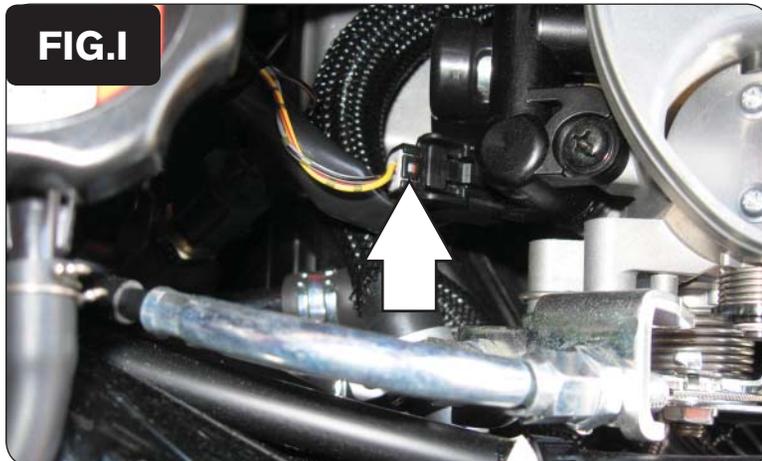

- 13 Unplug the stock wiring harness from the front injector as shown in Figure I.

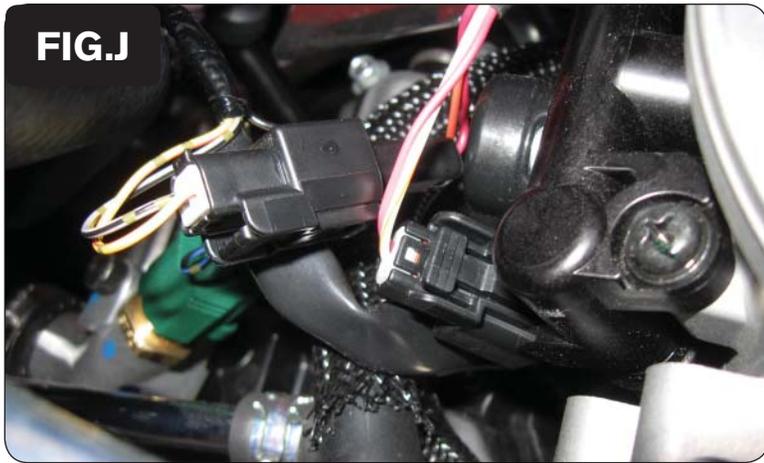

- 14 Attach the orange colored wires from the PCFC to the front injector and wiring harness as shown in Figure J.
- 15 Reinstall the intake duct and tighten the clamp
- 16 Reinstall the fuel tank and seats.