

[POWER COMMANDER V]

2012-2013 Ducati Streetfighter 848

Installation Instructions



PARTS LIST

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro strips
- 1 Alcohol swab
- 4 Zip ties
- 1 Posi tap

THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION!


THE LATEST POWER COMMANDER SOFTWARE AND MAP FILES CAN BE DOWNLOADED FROM OUR WEB SITE AT:
www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

POWER COMMANDER V INPUT ACCESSORY GUIDE

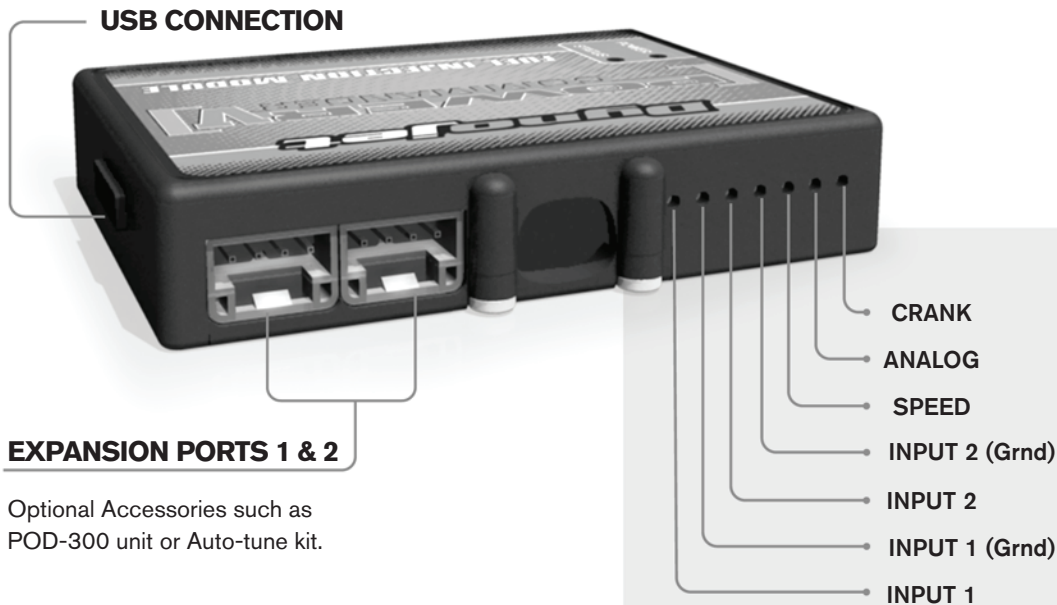

Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



ACCESSORY INPUTS

Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

Speed-



If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

Analog-

This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

Crank-


Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

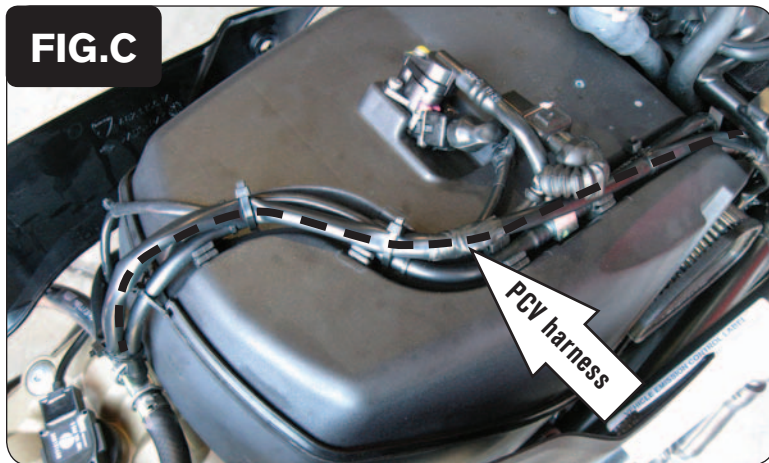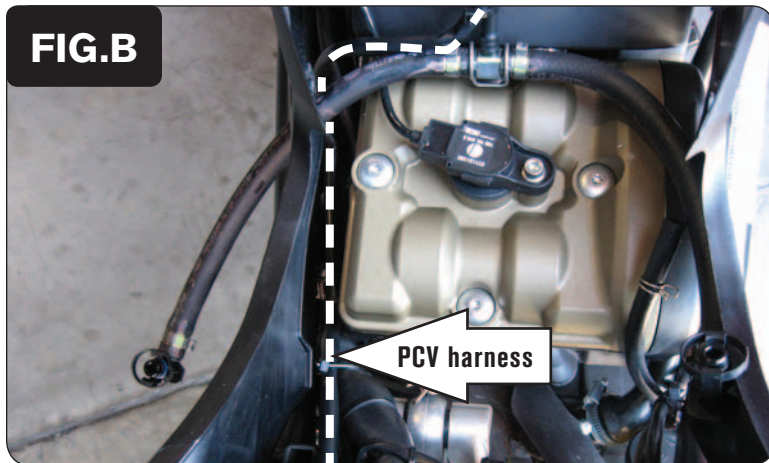


- 1 Remove the seat and fuel tank.
- 2 Secure the PCV to the inner right hand side of the tail section using the supplied Velcro (Fig. A).
Clean both surfaces with the supplied alcohol swab prior to applying the Velcro adhesive.
- 3 Route the PCV harness under the subframe and go down the left side of the rear cylinder and follow the stock wiring harness to the rear injector on top of the airbox.

- 4 Route the PCV harness down the left side of the rear cylinder and follow the stock wiring harness to the rear injector on top of the airbox (Fig. B).


- 5 Continue routing the PCV harness along the stock wiring harness to the front of the air box (Fig. C). Use the supplied zip ties to secure the PCV harness to the stock harness.

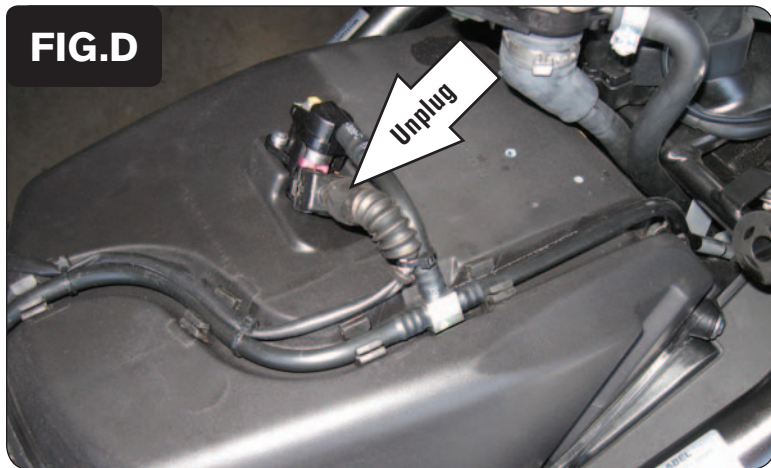


- 6 Unplug the stock wiring harness from the rear fuel injector (Fig. D).

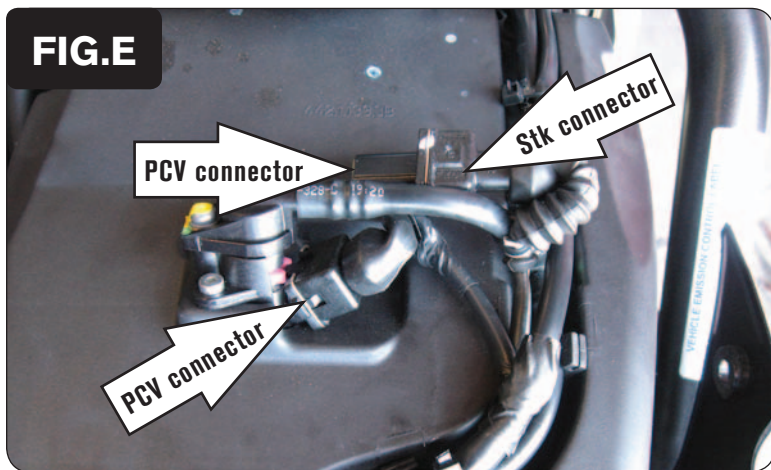


- 7 Plug the pair of PCV leads with YELLOW colored wires in-line of the rear fuel injector and the stock harness (Fig. E).

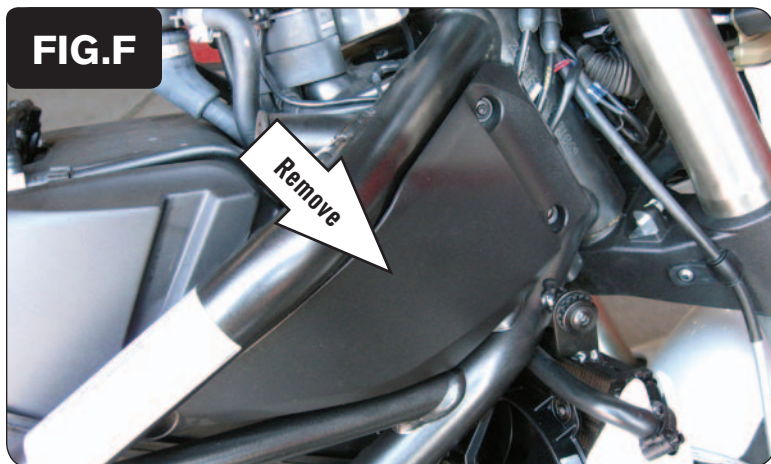


- 8 Remove the right hand side frame cover (Fig. F).

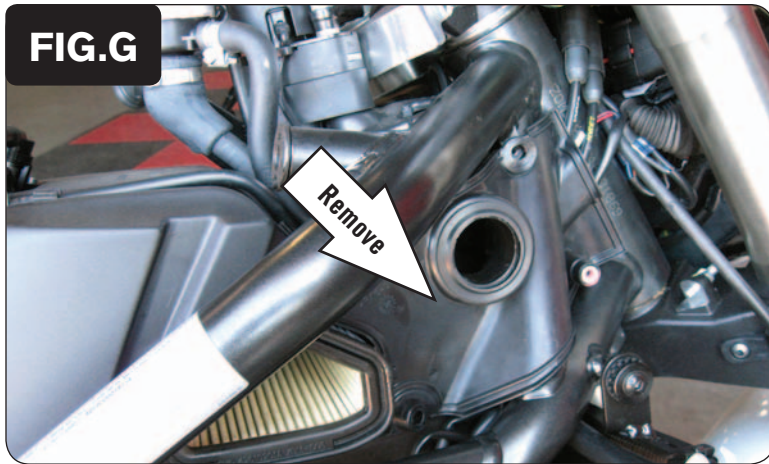



9 Remove the inner cover (Fig. G).

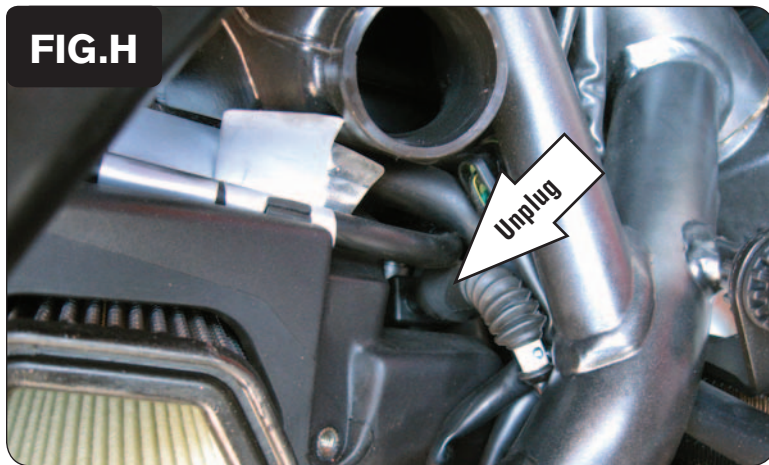

10 Unplug the stock wiring harness from the front fuel injector (Fig. H).

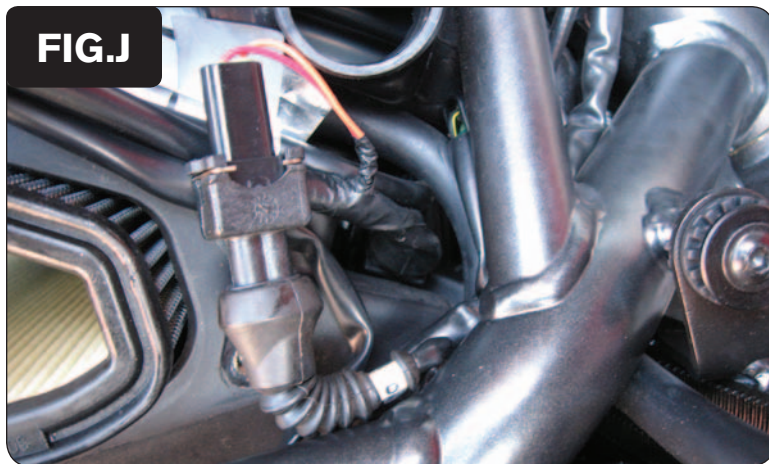


11 Plug the pair of PCV leads with ORANGE colored wires in-line of the stock wiring harness and the front fuel injector (Fig. J).

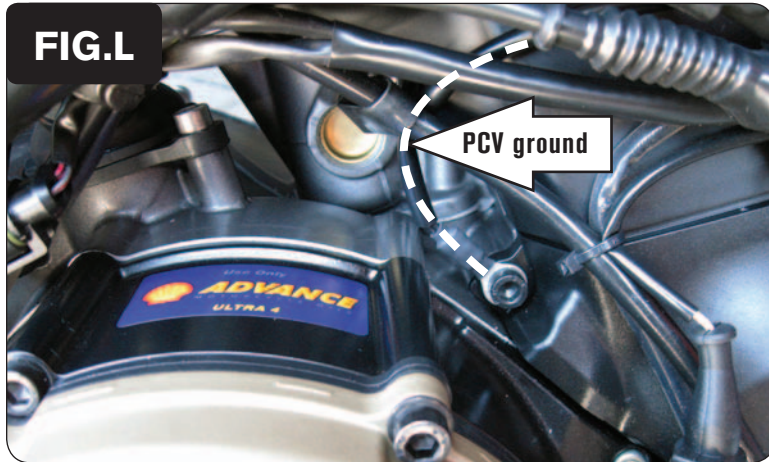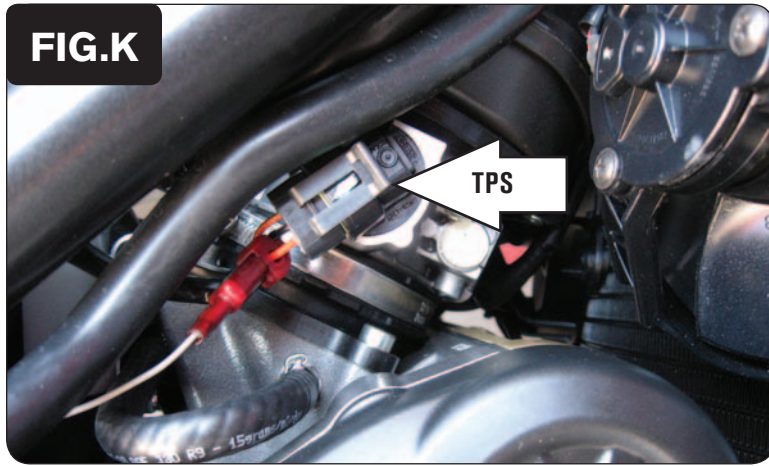

- 12 Locate the Throttle Position Sensor on the right hand side of the throttle bodies.
- 13 Using the supplied Posi-tap, attach the unterminated GREY wire from PCV to the stock ORANGE wire of the stock TPS harness (Pin Position C).

The wire tap shown in Figure K is NOT a Posi-tap. This is an older crimp-on style wire tap.

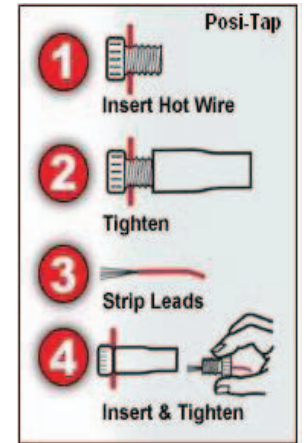

- 14 Attach the ground wire of the PCV with the small ring lug to the engine bolt on the right hand side near the clutch cover (Fig. L).
- 15 Reinstall the covers, fuel tank, and seat.

Optional inputs:

Speed - GREY/WHITE wire from the speed sensor located above the clutch cover

12v source for Auto-tune - RED wire of 4-pin connector under rear cowling

Note: *The PCV can not control the closed loop air/fuel ratio unless you are using the Optional O2 Optimizer (PN: 76125032).*