

# [POWER COMMANDER V]

**2006-2008 Moto Guzzi  
Griso 1100 / Breva 1100**

**Installation Instructions**



## **PARTS LIST**

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 3 Velcro strips
- 1 Alcohol swab
- 1 Posi-tap

**THE IGNITION MUST BE TURNED  
OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER  
SOFTWARE AND MAP FILES CAN BE  
DOWNLOADED FROM OUR WEB SITE AT:  
[www.powercommander.com](http://www.powercommander.com)

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

**Dynojet**

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 [www.powercommander.com](http://www.powercommander.com)

# POWER COMMANDER V INPUT ACCESSORY GUIDE

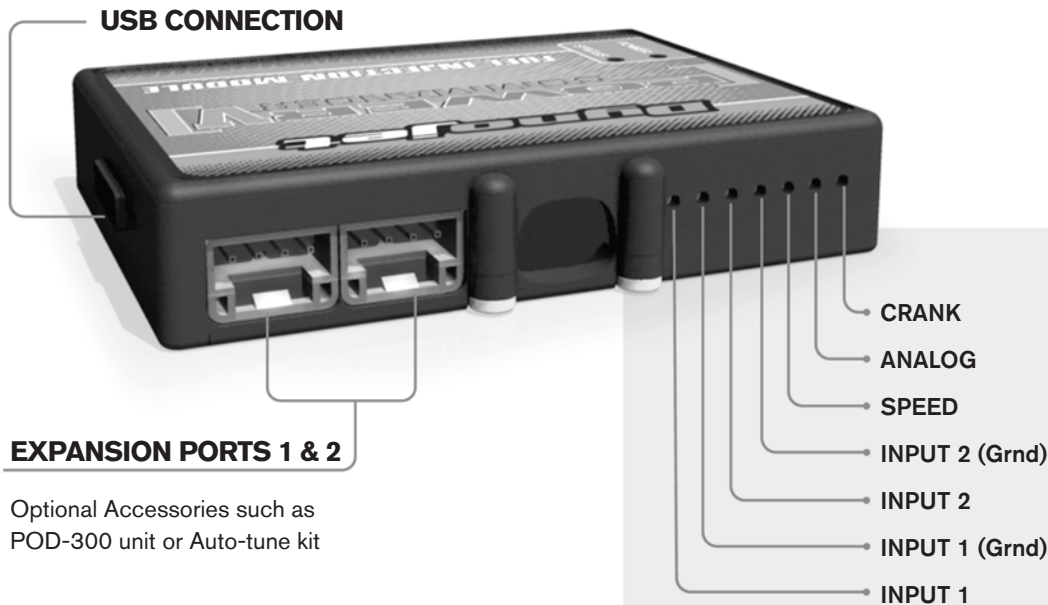

## Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



## ACCESSORY INPUTS

### Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

### Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

### Speed-


If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

### Analog-


This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

### Crank-

Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

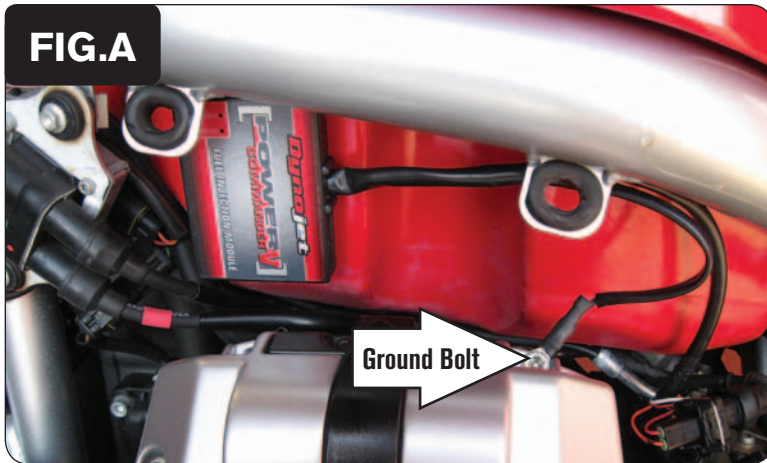

- 1 Remove the seat.
- 2 Remove the fuel tank sidecovers.
- 3 Secure the PCV module to the left side of the fuel tank with the supplied Velcro (Fig. A).  
*Clean both surfaces with the supplied alcohol swab prior to applying the Velcro adhesive.*
- 4 Attach the PCV ground wire with the small ring lug to the valve cover bolt shown in Figure A.

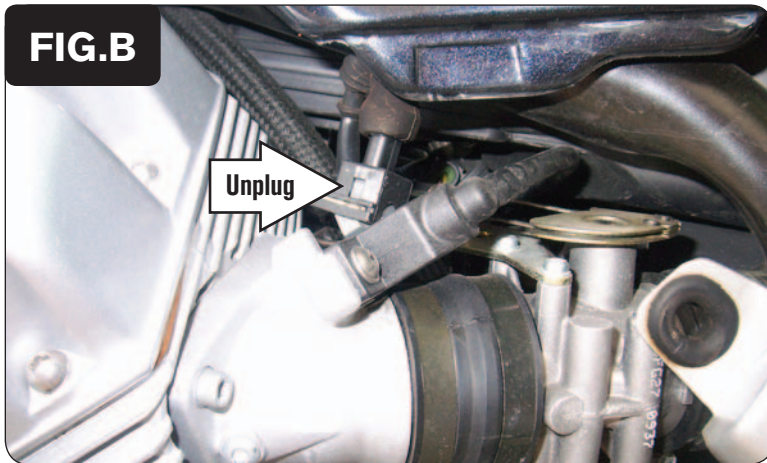


- 5 Unplug the stock wiring harness from the fuel injector on the LEFT cylinder head (Fig. B).




- 6 Plug the pair of PCV leads with ORANGE colored wires in-line of the LEFT cylinder fuel injector and the stock wiring harness (Fig. C).



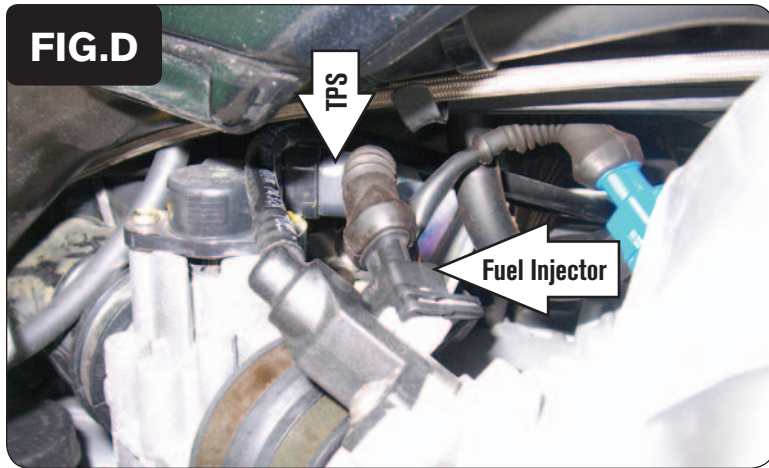



- 7 Unplug the stock wiring harness from the injector (Fig. D).
- 8 Unplug the stock wiring harness from the Throttle Position Sensor.

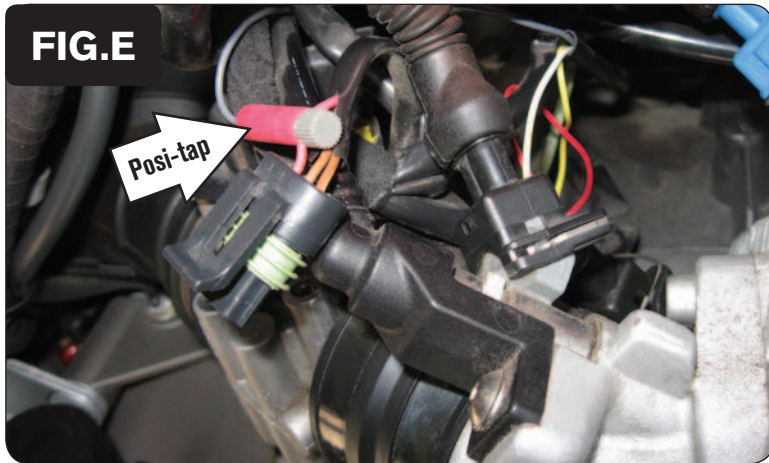

- 9 Using the supplied Posi-tap, attach the GREY wire of the PCV to the stock RED wire of the TPS wiring harness (Fig. E).

*This is position "C" on the stock TPS connector.*

- 10 Plug the stock TPS connector back onto the TPS.

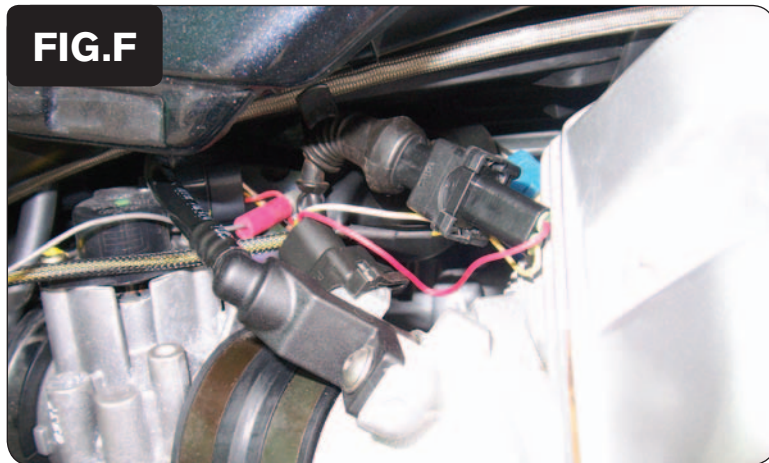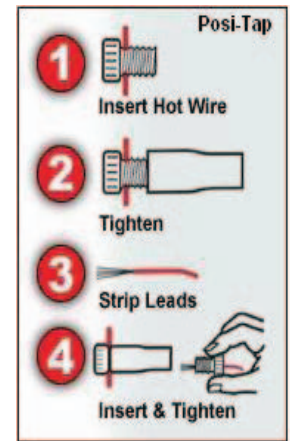

- 11 Plug the pair of PCV leads with YELLOW colored wires in-line of the RIGHT cylinder fuel injector and the stock wiring harness (Fig. F).
- 12 Reinstall the seat and sidecovers.