

[POWER COMMANDER V]

2014 EBR 1190RX

Installation Instructions



PARTS LIST

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro strips
- 1 Alcohol swab
- 1 Posi-tap

**THE IGNITION MUST BE TURNED
OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER
SOFTWARE AND MAP FILES CAN BE
DOWNLOADED FROM OUR WEB SITE AT:
www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

POWER COMMANDER V INPUT ACCESSORY GUIDE

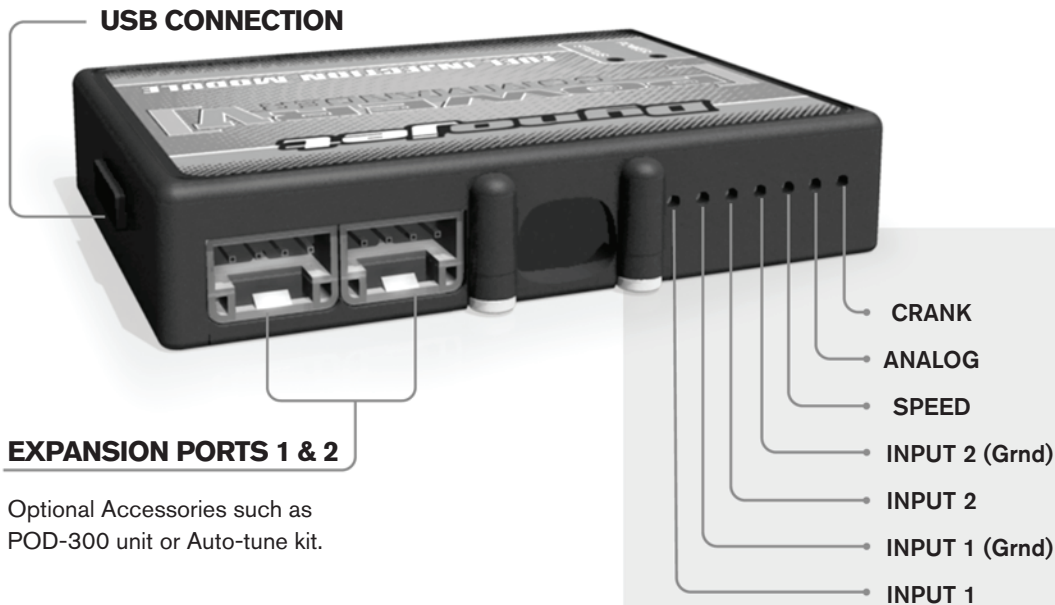

Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



ACCESSORY INPUTS

Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

Speed-


If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

Analog-


This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

Crank-

Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

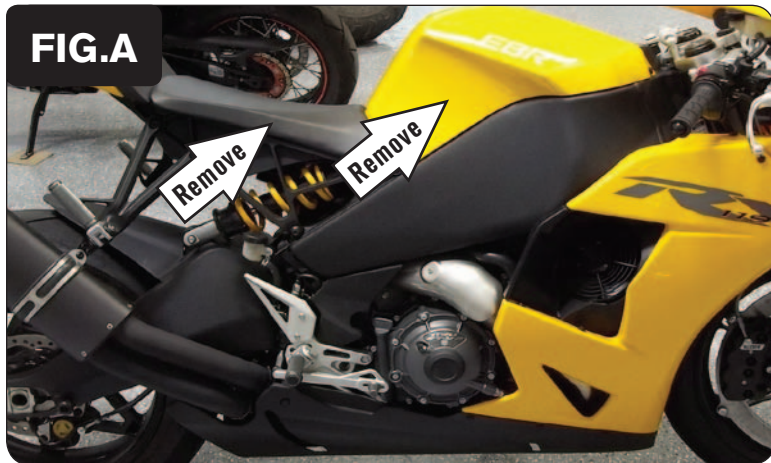

- 1 Remove the rider's seat and the covering above the airbox directly in front of the rider's seat (Fig. A).

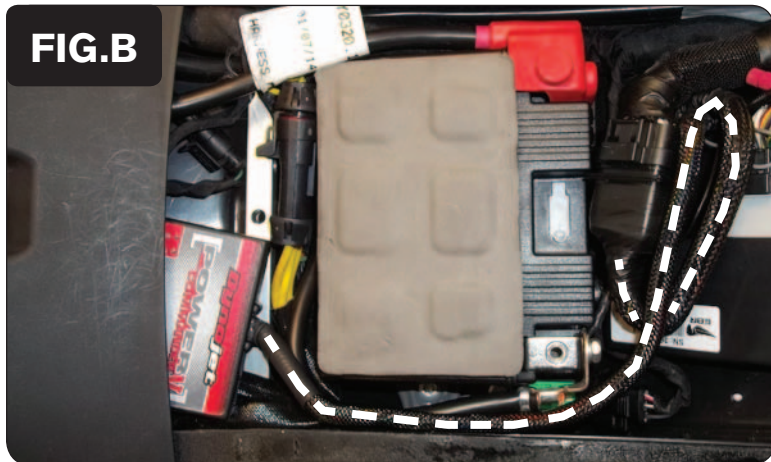


- 2 Store the PCV module in the tail section behind the battery. Route the wiring harness forward towards the ECU (Fig. B).


The supplied Velcro strips can be used to secure the PCV module in the tail. Clean both surfaces with the supplied alcohol swab prior to applying the Velcro adhesive.




- 3 Secure the PCV ground wire with the small ring lug to the negative (-) terminal of the bike's battery (Fig. C).

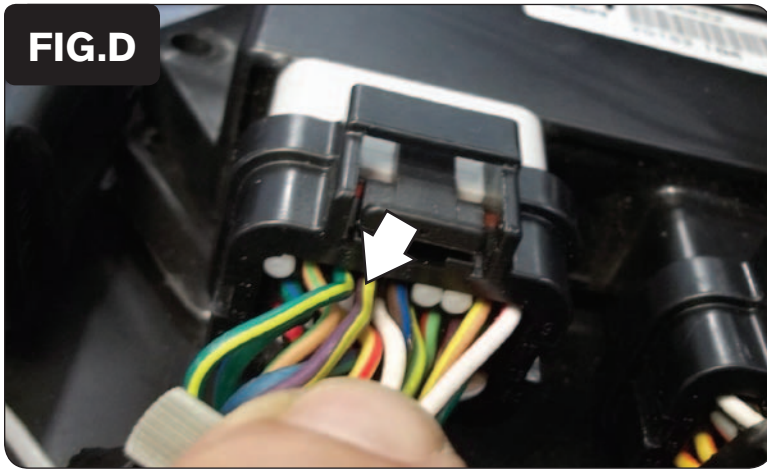

- 4 Locate the stock PURPLE/YELLOW wire on the ECU connector going to the GREY ECU connector input (Fig. D).

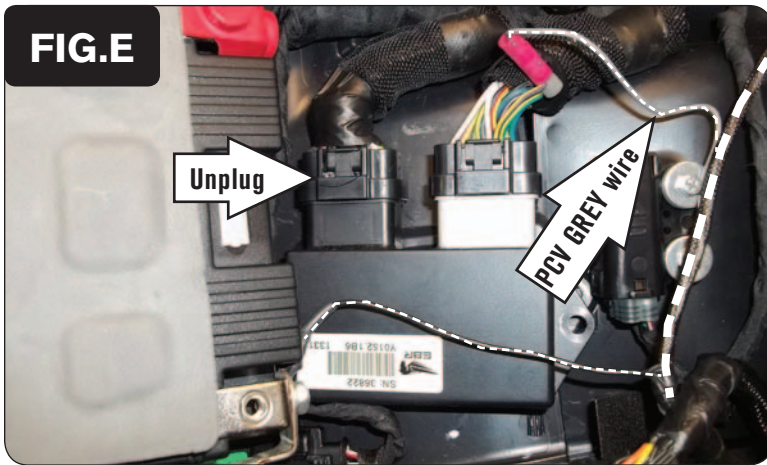

- 5 Using the supplied Posi-tap, attach the single unterminated GREY wire of the PCV wiring harness to the stock PURPLE/YELLOW wire (Fig. E).
- 6 Unplug the ECU connector going to the BLACK ECU connector input.

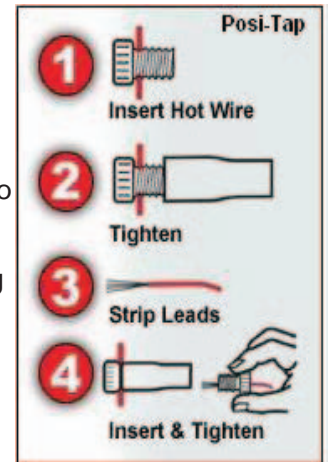


- 7 Plug the PCV wiring harness in-line of the ECU and the stock wiring harness (Fig. F).

Bundle the harness and lay it as flat as possible for reinstallation of the seat.



- 8 Route the pair of 3-pin connectors on the PCV wiring harness forward and behind the plastic panel directly rear of the airbox that holds the bank angle sensor (Fig. G).

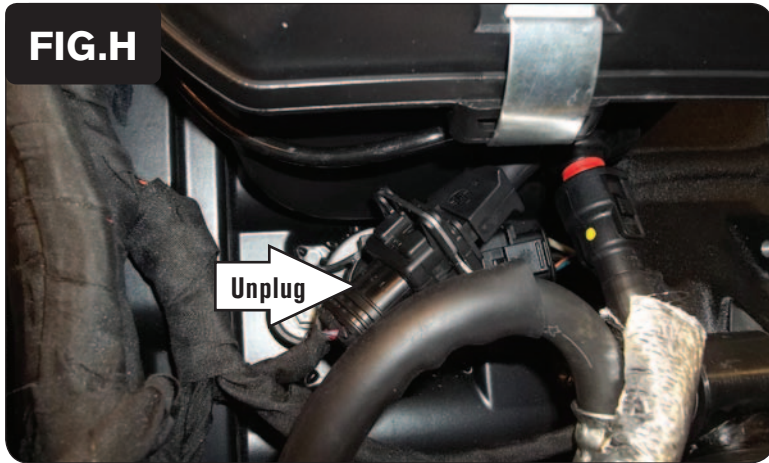

- 9 Behind the panel, locate and unplug the stock Crank Position Sensor connectors (Fig. H).



- 10 Plug the pair of 3-pin connectors on the PCV wiring harness in-line of the stock Crank Position Sensor connectors (Fig. J).
- 11 Reinstall the cover and the seat.