

# [POWER COMMANDER V]

**2017 Aprilia Tuono 1100**

**Installation Instructions**



## **PARTS LIST**

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro strips
- 1 Alcohol swab
- 2 Posi-taps

**THE IGNITION MUST BE TURNED  
OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER  
SOFTWARE AND MAP FILES CAN BE  
DOWNLOADED FROM OUR WEB SITE AT:  
[www.powercommander.com](http://www.powercommander.com)

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

**Dynojet**

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 [www.powercommander.com](http://www.powercommander.com)

# POWER COMMANDER V INPUT ACCESSORY GUIDE

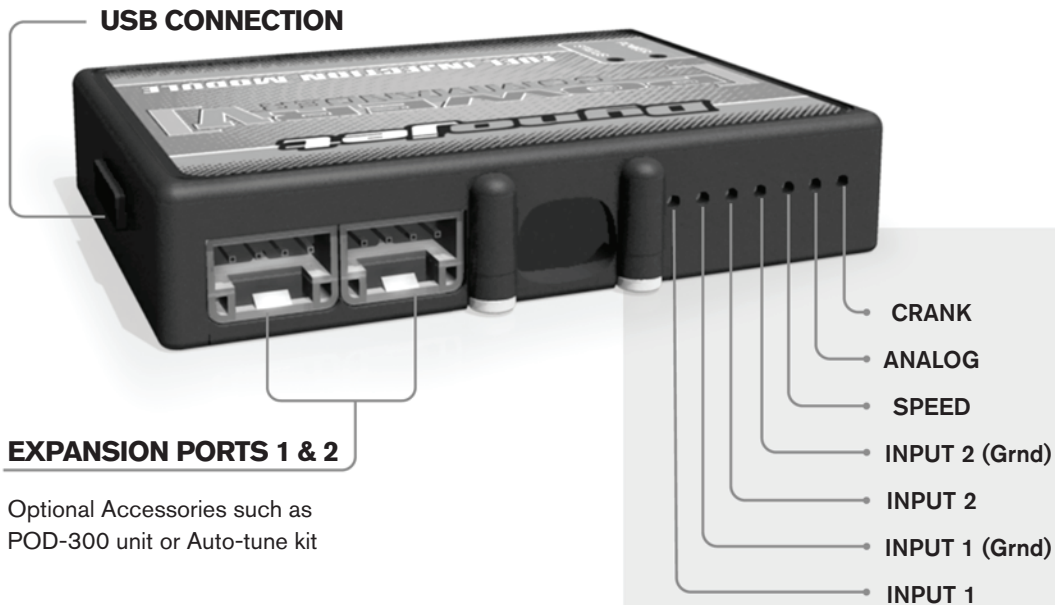

## Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



## ACCESSORY INPUTS

### Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

### Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

### Speed-


If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

### Analog-


This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

### Crank-


Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

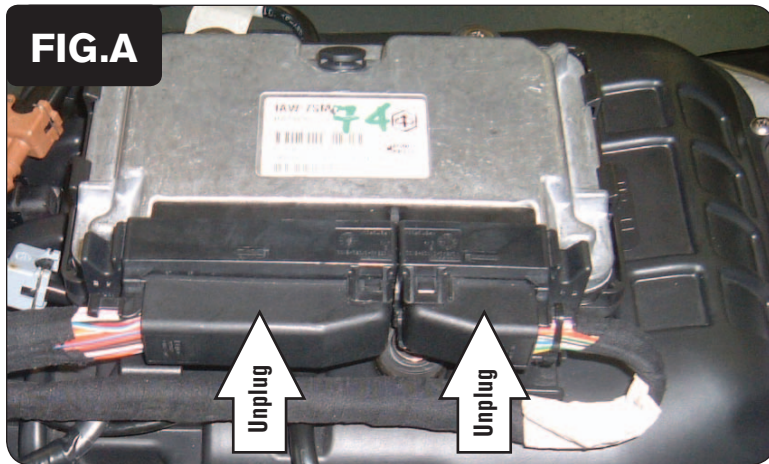


- 1 Remove the seat.
- 2 Remove the fuel tank.
- 3 Unplug the stock wiring harness from the ECU (Fig. A).

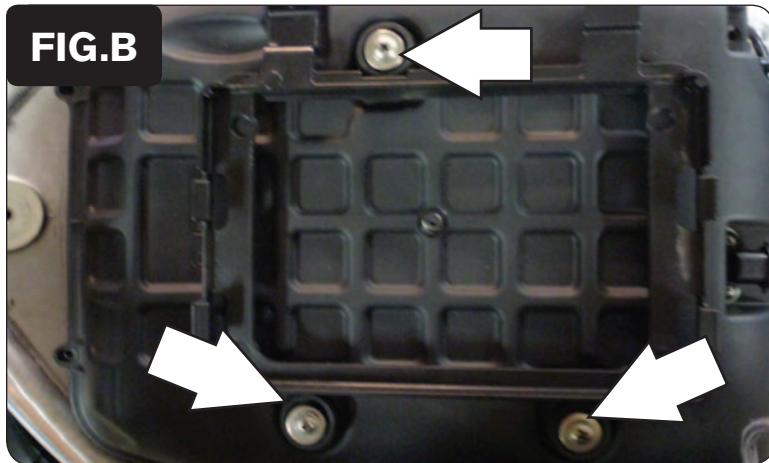


- 4 Remove the ECU tray by removing the 3 screws (Fig. B).
- 5 Remove the airbox lid.

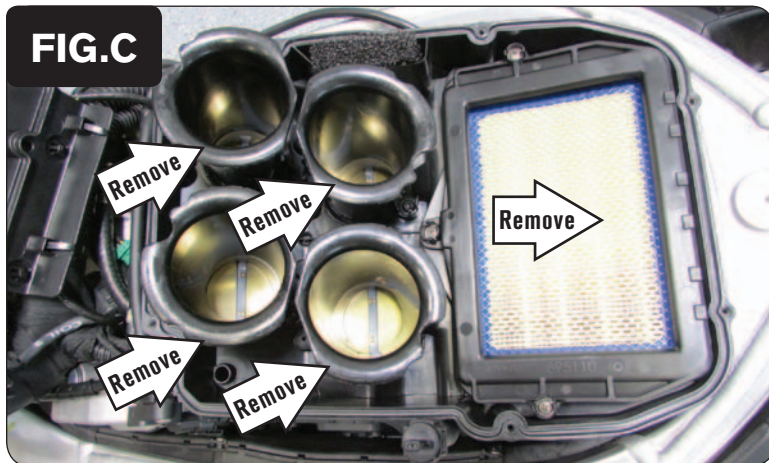

- 6 Remove the velocity stacks and the air filter (Fig. C)..

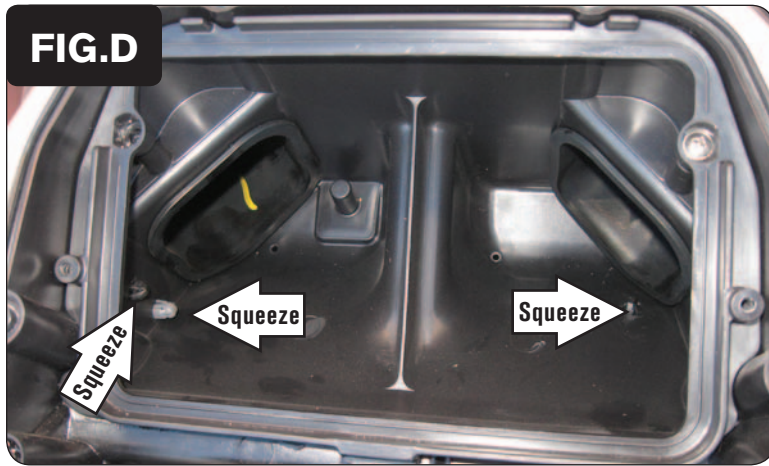


- 7 Remove the lower half of the airbox. There are 3 pins that must be squeezed to be removed (Fig. D).

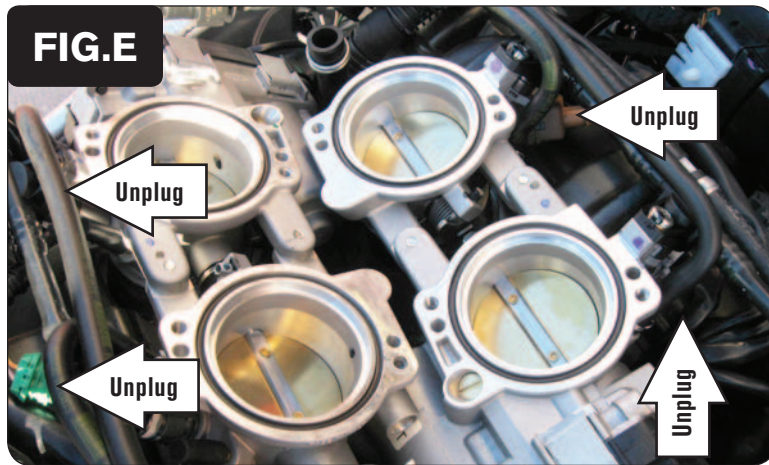

- 8 Unplug the stock wiring harness from each of the four fuel injectors (Fig. E).



- 9 Using the supplied Velcro secure the PCV to the side of the battery.  
*Make sure to clean the surfaces with the alcohol swab before attaching.*
- 10 Secure the ground wire of the PCV to the negative (-) terminal of the bike's battery.
- 11 Route the PCV harness along the subframe and go towards the throttle bodies (Fig. F).

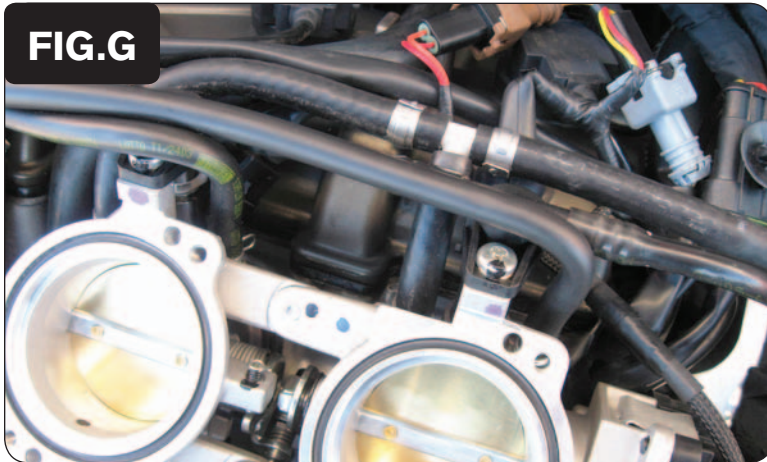


- 12 Plug the connectors from the **PCV** in-line of the fuel injectors and stock wiring harness (Fig. G).

**PCV harness:**

ORANGE - table #1 - Stock BROWN connector

YELLOW - table #2 - Stock GREY connector

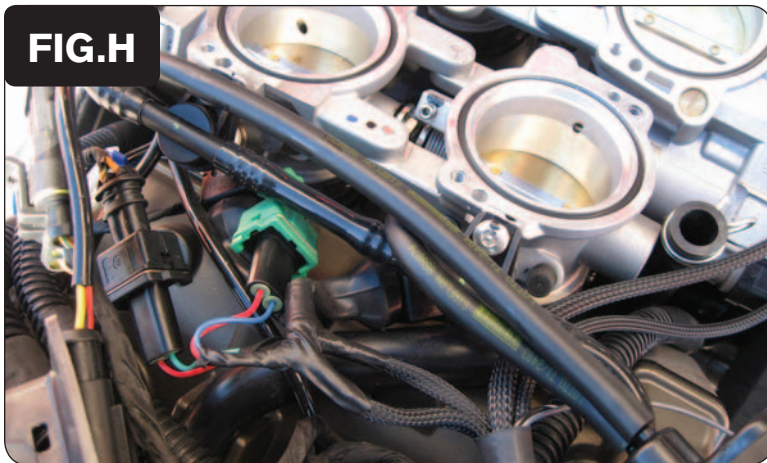


- 13 Plug the connectors from the **PCV** in-line of the fuel injectors and stock wiring harness (Fig. H).

**PCV harness:**

GREEN - table #3 - Stock BLACK connector

BLUE - table #4 - Stock GREEN connector

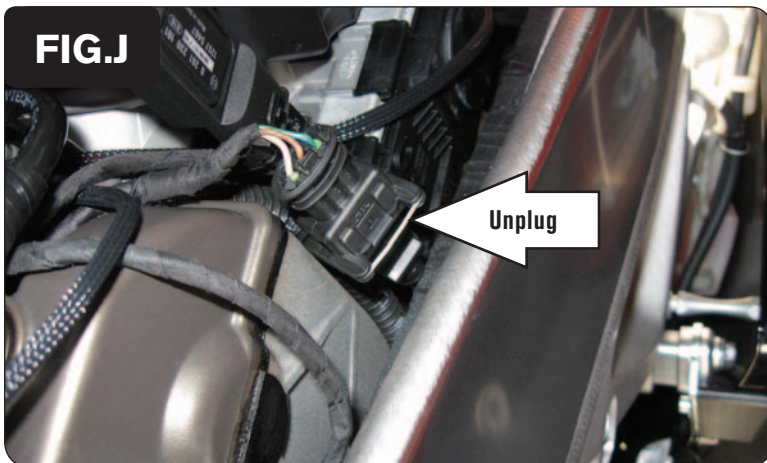


- 14 Locate and unplug the crank position sensor connectors (Fig. J).

*This 3-pin BLACK connector pair is located on the right side of the engine.*



- 15 Plug the 3-pin connectors from the PCV in-line of the stock crank position sensor connectors (Fig. K).
- 16 Reinstall the airbox, velocity stacks, and the air filter.

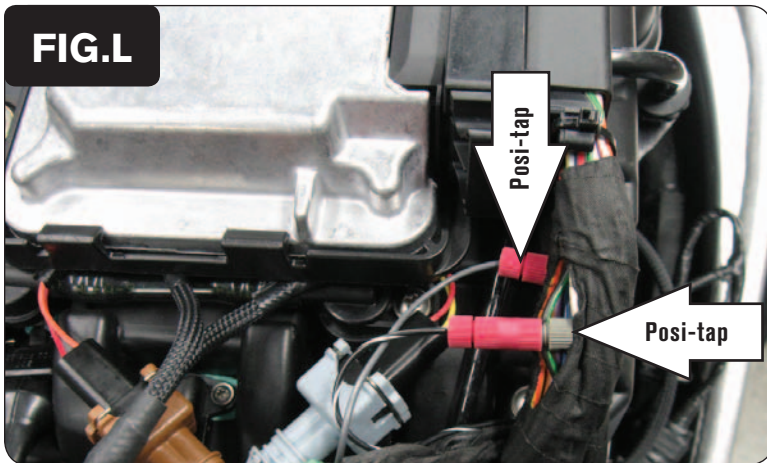

- 17 Cut back about 1" of tape from the stock ECU harness for the larger connector.
- 18 Attach the BLACK/WHITE wire from the PCV to the stock GREEN/BLACK wire of the stock wiring harness.
- 19 Attach the GREY wire from the PCV to the stock YELLOW/BLACK wire of the stock wiring harness (Fig. L).
- 20 Reinstall the ECU, the fuel tank, and the seat.

