

[POWER COMMANDER V]

2006-2018 Kawasaki VN900

Installation Instructions



PARTS LIST

- 1 Power Commander
- 1 USB Cable
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro strips
- 1 Alcohol swab

**THE IGNITION MUST BE TURNED
OFF BEFORE INSTALLATION!**


THE LATEST POWER COMMANDER
SOFTWARE AND MAPS FILES CAN BE
DOWNLOADED FROM OUR WEB SITE AT:
www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com


POWER COMMANDER V INPUT ACCESSORY GUIDE

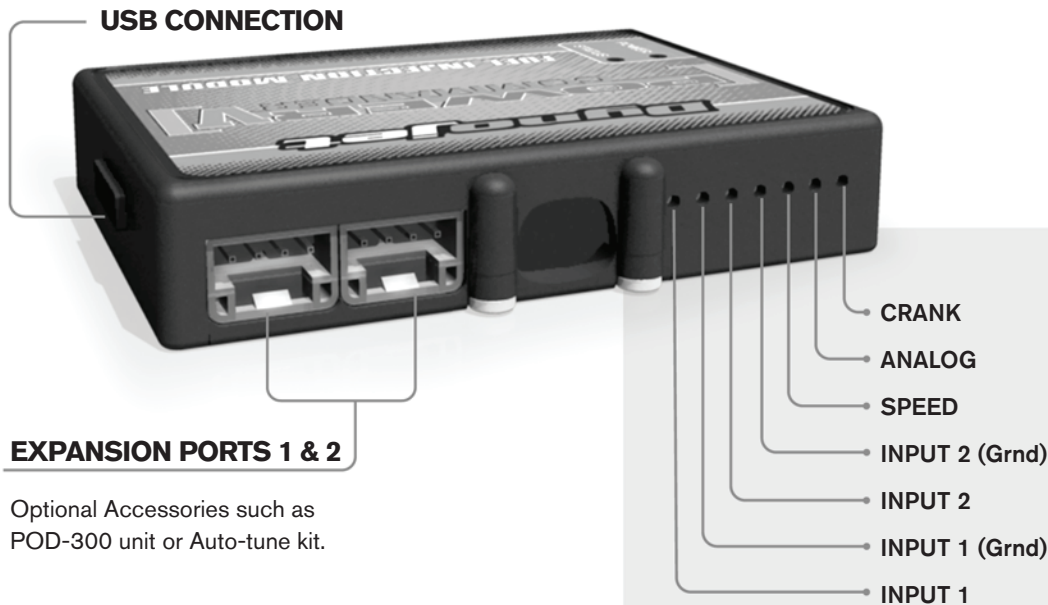

Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.

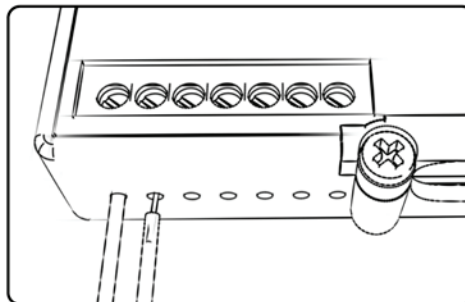

ACCESSORY INPUTS

Map -

(Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated. (Set to Switch Input #1 by default.)

Shifter-

(Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important. (Set to Switch Input #2 by default.)

Speed-




If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

Analog-

This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.


Crank-

Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

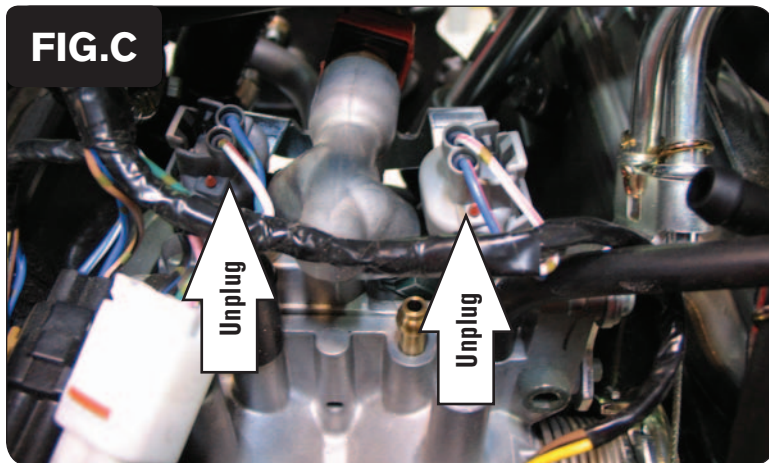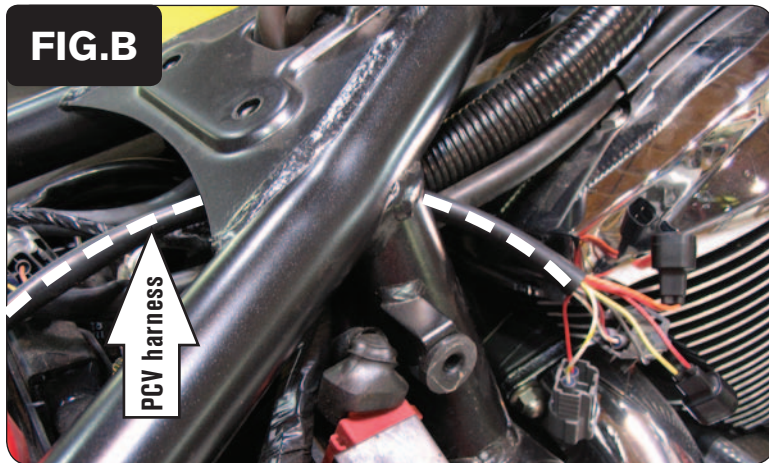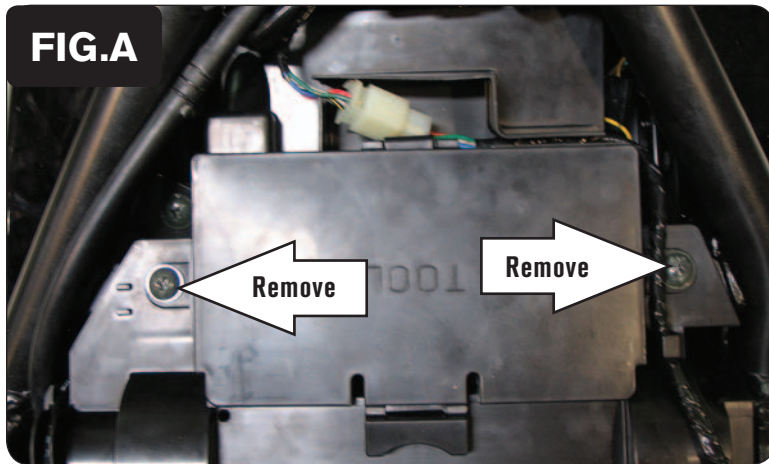

- 1 Remove the seat. Remove the fuel tank
- 2 Remove the battery cover by removing the 2 screws (Fig. A).
- 3 Lay the PCV near the battery temporarily. Route the PCV under the frame and route along side the stock harness towards the throttle bodies (Fig. B)
- 4 Unplug the stock wiring harness from both of the fuel injectors at the top of the throttle bodies (Fig. C).

FIG.D

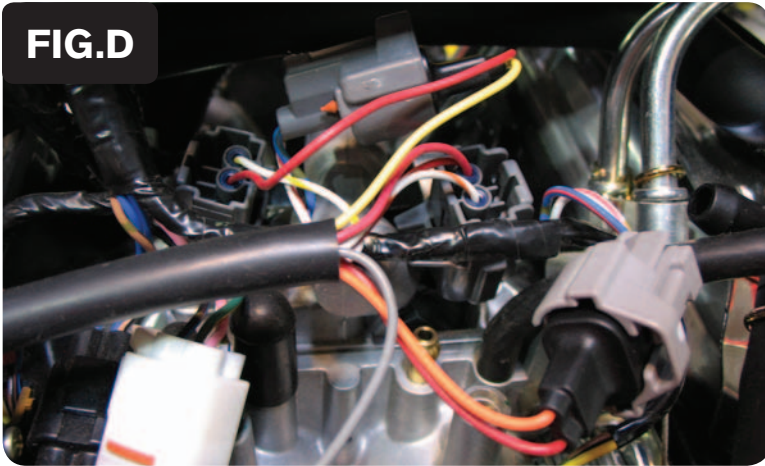


- 5 Plug the PCV harness in-line of the stock fuel injectors and the wiring harness (Fig. D).

Connect the ORANGE colored PCV wires to the front cylinder.

Note: Hoses were disconnected for picture clarity

FIG.E

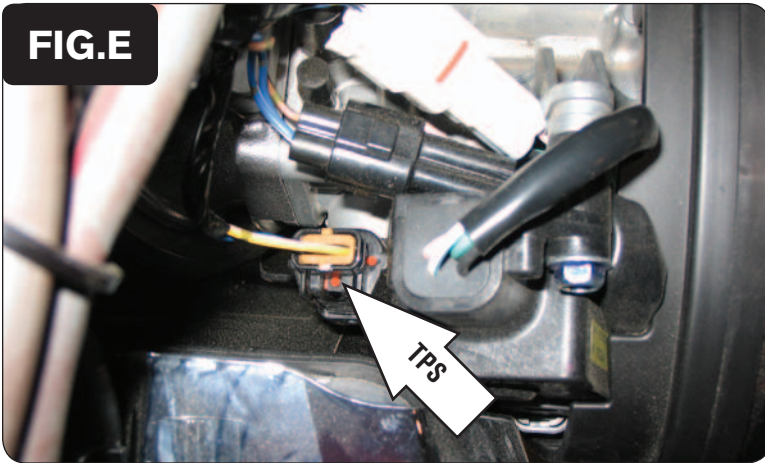

- 6 Locate the Throttle Position Sensor connector (Fig. E). Unplug this connector. This connector is located on the right side of the bike behind the air box.
- 7 Plug the 3 pin connectors from the PCV in-line of the stock wiring harness and TPS.

FIG.F



- 8 Lift up on the battery box and route the PCV harness underneath the mounting tab (Fig. F).
- 9 Attach the ground wire from the PCV to the negative side of the battery (Fig. F).



- 10 Install the PCV to the rear of the battery box (Fig. G). Make sure the PCV is mounted down about 2 inches from the top of the battery box to clear the swingarm.
- 11 Reinstall the battery cover making sure the PCV harness does not get damaged.
- 12 Reinstall the seat and fuel tank.

Optional inputs:

Speed input - Light GREEN/RED wire at ECU

Temperature input - ORANGE wire

12v source for Auto-tune - RED wire of 6 pin connector for tail light.